urmet DOMUS

Mod.
1093

DS1093-039

4 CHANNEL VIDEO DVR H.264
Ref. 1093/064SN

8 CHANNEL VIDEO DVR H.264
Ref. 1093/065SN

16 CHANNEL VIDEO DVR H.264
Ref. 1093/066SN

USER MANUAL

TABLE OF CONTENTS

1 General information 5
1.1 Product description 5
1.1.1 General features 5
1.2 Opening the package 7
1.2.1 Contents of the package 7
1.3 Warnings 7
1.3.1 Power 7
1.3.2 Safety precautions 7
1.3.3 Installation precautions 7
1.3.4 Cleaning the device 7
1.3.5 Hard disk 8
1.3.6 Image recording 8
1.3.7 Privacy and Copyright 8
1.3.8 Software upgrades 8
1.3.9 Firmware upgrades 8
1.3.10 Network installation 8
1.3.11 Network connection 8
2 Description of the parts 9
2.1 Front panel 9
2.2 Rear panel 10
2.3 IR remote control 11
2.3.1 Batteries 11
2.4 Mouse 12
2.5 Using the Soft Keyboard 13
3 Product Application Diagram 14
4 General settings 15
4.1 Switch-on 15
4.2 How to switch the device off 15
4.2.1 Shutdown in Menu 15
4.2.2 Manual Shutdown 15
4.3 Remote control enable 15
4.4 Rebooting and Locking Your DVR 16
4.5 Using the Setup Wizard 16
4.6 Setting Date & Time 19
5 Watching a Live Preview 20
5.1 Understanding Live Preview Icons 20
5.2 Operating the Live Preview 20
5.3 Using the Mouse in Live Preview 21
5.4 Using Digital Zoom 21
5.5 Configuring Live Preview Displays 22
5.6 Setting Camera Order 23
6 Configuring Settings for Recording 24
6.1 Initializing Record Settings 24
6.2 Scheduling a Recording 25
6.3 Starting a Manual Recording 26
6.4 Protecting Recorded Files 26
6.4.1 Locking and Unlocking Recorded Files 26
6.4.2 Setting HDD to Read-Only 27
6.5 Configuring Advanced HDD Settings 28
6.5.1 Setting up HDD Redundancy 28

7 Playing Back a Recording 30
7.1 Understanding the Playback Interface 30
7.2 Playing Back from Search 31
7.3 Playing Back from Live Preview 32
7.4 Playing Back from System Log 33
7.5 Playing Back Frame-by-Frame 33
7.6 Using Digital Zoom 33
8 Backing up Recorded Files 34
8.1 Exporting Files 34
8.2 Exporting Video Clips 36
8.3 Managing Backup Devices 36
9 Configuring Alarms 37
9.1 Setting up Motion Detection 37
9.2 Setting up Sensor Alarms 39
9.3 Triggering Alarm Outputs Manually 41
9.4 Detecting Video Loss 42
9.5 Detecting Video Tampering 43
9.6 Setting Exception 44
9.6.1 Understanding Exception Trigger Options 45
10 Configuring Network Settings 46
10.1 Configuring Basic Settings 46
10.2 Configuring PPPoE Settings 47
10.3 Configuring DDNS 48
10.4 Configuring an NTP Server 49
10.5 Configuring a Remote Alarm Host 50
10.6 Configuring Multicast 50
10.7 Configuring Server and HTTP Ports 51
10.8 Configuring E-mail Settings 51
11 PTZ Controls 52
11.1 Navigating PTZ Menus 52
11.2 Configuring PTZ Settings 53
11.3 Setting PTZ Presets, Patrols & Patterns 53
11.3.1 Understanding PTZ Controls 53
11.3.2 Customizing Presets 54
11.3.3 Customizing Patrols 54
11.3.4 Customizing Patterns 56
12 Camera Management 57
12.1 Configuring OSD Settings 57
12.2 Setting up Privacy Mask 57
12.3 Adjusting Display Settings 58
13 Managing HDDs 59
13.1 Initializing HDDs 59
13.2 Setting HDD Groups 59
13.3 Setting HDD Status 60
13.3.1 Setting HDD to Read-Only 60
13.3.2 Setting HDD to Redundancy 60
13.4 Checking HDD Status 61
13.5 Configuring HDD Alarms 62
14 DVR Management 63
14.1 Configuring General Settings 63

14.1.1 Configuring Advanced Settings 63
14.2 Configuring RS-232 Port Settings 64
14.3 Managing User Accounts 65
14.3.1 Adding a New User 65
14.3.2 Deleting a User 67
14.3.3 Modifying a User 68
14.4 Managing System 68
14.5 Updating System Firmware 69
14.6 Restoring Default Settings 70
14.7 Viewing System Information 70
14.8 Viewing System Logs 71
15 Urmet Web Server 73
15.1 Introduction 73
15.2 User Login and Logout 73
15.3 Live Preview 74
15.3.1 3.1.1 Video Split Selection 74
15.3.2 3.1.2 Start/Stop Preview 75
15.3.3 3.1.3 Audio Control 75
15.4 Recording and Snapshot Capture 76
15.4.1 Manual Recording 76
15.4.2 Snapshot Capture 76
15.5 Voice Talk 77
15.6 Video Parameters Setting 77
15.7 PTZ Control 77
15.8 Playback 78
15.9 Archive Search 78
15.9.1 Playback 78
15.9.2 5.3 Snapshot Capture 79
15.10 Log Search 80
15.11 Local Configuration 81
15.12 Remote Configuration 81
16 Specifications (Pal format) 82
17 Maximum recording time with 500GB hard disk 84
17.1 Ref. 1093/064SN 84
17.2 Ref. 1093/065SN 86
17.3 Ref. 1093/066SN 88
18 Glossary 90
19 FAQ 91

1 GENERAL INFORMATION

Dear Customer,

Thank you for purchasing this product.

This document describes how to install and use URMET Domus Digital Video Recorder models 1093/064SN, 1093/065SN, 1093/066SN.
Read this manual which contains information for correct, safe use carefully. Keep this manual at hand so that you can refer to it when needed.

1.1 PRODUCT DESCRIPTION

URMET Domus DVR DVS series 093/064SN, 1093/065SN, 1093/066SN products are digital video recorders capable of recording several cameras on internal hard disk while showing live camera feed at the same time. Alternatively, up to four recorded cameras can be shown at the same time.

1.1.1 GENERAL FEATURES

- **Compression:**
- Support PAL/NTSC video input.
- Adopt H.264 video compression standard.
- Video encoding parameters of each channel can be set separately, including resolution, frame rate, bit rate, image quality.
- Each channel supports normal continuous and event compression parameters.
- Supports both composite stream and video only stream. Audio and video are strictly simultaneous.
- Supports dual stream function. The main-stream at 4CIF max resolution, sub-stream at CIF max resolution.
- Support watermak.

- **Monitoring:**
- Supports 2 local independent video output: VGA and BNC main/BNC spot video output.
- High definition VGA display supports 1280*1024 resolution.
- Supports 1/4/9/16 screen live view, channel sequence is adjustable.
- Support live view group switch, manual switch and automatic cycle, the interval of automatic cycle can be adjusted.
- Supports digital zoom on live view.
- Supports shielding the assigned live view channel.
- Supports motion detection, view tampering alert, video exception alert and video loss alert.
- Supports privacy mask.
- Supports Post-Event display.
- Supports various PTZ protocols, PTZ preset, patrol and pattern.
- Supports zoom in by clicking the mouse and trace function by dragging mouse.

- **HDD Management:**
- Supports 2 SATA HDD*. Each HDD can support up to 2TB capacity.
- Supports S.M.A.R.T. technology.
- Supports HDD standby function.
- Supports hard disk group management.
- HDD file system is compatible with Windows. Use pre-allocating hard disk management technology, and no disk fragments.

- **Recording and Playback:**
- Supports cycle and non-cycle recording mode.
- Supports normal and event video encoding parameters.
- Supports multiple recording types, including manual, continuous, alarm, motion, motion | alarm and motion & alarm recording, etc.
- Supports 8 recording time periods with separate recording types.
- Supports Pre-record and Post-record time for alarm and motion detection.
- Supports lock and unlock video files.
- Supports local redundant recording.
- Supports setting hard disk to read only.
- Supports video data search and playback by channel number, recording type, time, etc.
- Supports digital zoom function in playback.
- Supports pause, play fast, play slow, skip forward, and skip backward when playback, locating in progress bar by dragging the mouse.
- Supports synchronous playback until max: 4ch.(1093/064SN); 8ch (1093/065SN); 16ch (1093/066SN).

- **Backup:**
- Supports USB device backup.
- Supports SATA CD/DVD-R/W backup.
- Supports backup by file or by time.
- Supports backup device maintenance and management.
- Supports video clips backup when playback.

- **Alarm & Exception:**
- Supports alarm in/out arming schedule setting.
- Supports various alarm input such as hard disk full, illegal access, network break, IP conflicted, hard disk error, video exception, and video output standard mismatch.
- Supports various alarm response such as camera recording, relay out, on screen warning, audible warning, email and upload to center, etc.
- Supports auto recovery from exceptions.

- **Network:**
- Supports 10/100M adaptive network interface.
- Supports TCP/IP protocols, PPPoE, DHCP, DNS, DDNS, NTP, and SADP, etc.
- Supports unicast and multicast, support TCP, UDP, and RTP for unicast.
- Supports remote search, playback and download video files, support breakpoint resume.
- Supports remote configuration, support remote import and export of DVR settings.
- Supports remote acquisition of device status, system log and alarm status.
- Supports remote button operation, remote locking and unlocking of panel buttons.
- Supports remote format of hard disk, upgrade, reboot, shutdown and other system maintenance operations.
- Supports RS-232 and RS-485 transparent channel transmission.
- Supports event alarm and exceptions upload to remote management host.
- Supports remote manual recording.
- Supports remote PTZ control.
- Supports voice talk and broadcast.
- Supports email with attached pictures.
- Built-in WEB Server.

- **Other:**
- Supports front panel, mouse, and IR control.
- Supports multi-level user management, each user can have individual DVR access rights.
- Powerful DVR log, including operation, alarm and exception log.

☞IMPORTANT NOTE

(*) Contact an authorised Service Centre for increasing the recording capacity of 1093/064SN, 1093/065SN and 1093/066SN devices.

1.2 OPENING THE PACKAGE

Check that the packing and the contents are not visibly damaged. Contact the retailer immediately if parts are either missing or damaged. Do not attempt to use the device in this case. Send the product back in its original packing if it is damaged.

1.2.1 CONTENTS OF THE PACKAGE

- DVR
- Power cord with Italian plug
- Power cord with Shuko plug
- Mouse
- SATA cable
- Brackets for installation in a rack
- IR remote control (two size AAA batteries included)
- Fastening screws
- CD-ROM containing software and manuals
- Cross UTP Cat-5 network cable with RJ45 connector
- Loopthrough cable

☞IMPORTANT NOTE
Accessories may be changed without prior notice.

1.3 WARNINGS

1.3.1 POWER

- Check mains rating before plugging the power unit in.
- Do not pull the cable to unplug the device.
- Switch the device off before unplugging power unit. This operation must not be performed when the DVR is recording, playing or from the configuration menu. Stop recordings and playback in progress before disconnecting power from the device to prevent damaging the hard disk beyond repair.

1.3.2 SAFETY PRECAUTIONS

- Keep the device away from rain and humidity to prevent risk of fire and electrocution. Do not introduce material (solid or liquid) inside. If this should accidentally occur, disconnect the device from the mains and have it inspected by qualified personnel.
- Never open the device. In all cases, contact a qualified personnel or authorised service centre for repairs.
- Keep the device away from children, to prevent accidental damage.
- Do not touch the device with wet hands to prevent electrical shock or mechanical damage.
- Do not use the device if it should fall or the external casing is damaged. Risk of electrocution if the device is used in such conditions. Contact the retailer or authorised installer.

1.3.3 INSTALLATION PRECAUTIONS

- To prevent overheating the device, arrange it in a position allowing the flow of air through the slots in the casing. Ensure at least 5 cm of free space when installing inside a rack. For the same reason, do not install sources of heat, such as radiators or hot air ducts. Keep away from direct sunlight. Do not install in areas subject to excessive dust, mechanical vibrations or shocks.
- Do not arrange this device on an unstable surface, such as a tottering or slanted table. The device could fall causing injury or mechanical failures.
- Do not install the device in a place where it could be exposed to humidity or water. Do not direct a jet of water onto the device: risk of fire, electrocution or mechanical failure.
- Stop using the device if water or other material should penetrate inside: risk of fire and electrocution. Contact the retailer or authorised installer.
- Do not place heavy or heat generating objects on top of the device: this could damage the casing and/or increase internal temperature causing faults.
- Do not cover the device with a cloth while it is running to prevent deforming the external casing and overheating the internal parts: risk of fire, electrocution and mechanical failure.
- Keep magnets and magnetised objects away from the device to prevent faults.
- Do not use the device in presence of smoke, vapour, humidity, dust or intense vibrations.
- Wait for a while before operating a device immediately after transporting it from a cold place to a warm place and vice versa. Wait on average for three hours: this will allow the device to adapt to the new ambient (temperature, humidity, etc.).

1.3.4 CLEANING THE DEVICE

- Rub delicately with a dry cloth to remove dust and dirt.
- Dip the cloth in neutral detergent if dirt cannot be eliminated with a dry cloth alone.
- Do not use volatile liquids (such as petrol, alcohol, solvents, etc.) or chemically treated clothes to clean the device to prevent deformation, deterioration or scratches to the paint finish.

1.3.5 HARD DISK

- The hard disk installed in this device is sensitive to shocks, differences in temperature and vibrations. Disrespect of these precautions can compromise correct operation of the device and cause loss of data stored on the hard disk.
- If repairs are required, it is advisable to backup all important data before taking the device to the service centre. URMET Domus S.p.A. is not liable for loss of stored data.
- The addition of a hard disk must be performed by qualified technical personnel or by contacting the technical assistance service.

1.3.6 IMAGE RECORDING

- This device was designed to record images, not as a burglar alarm. URMET Domus S.p.A. cannot be held liable for loss or damage following theft sustained by the user.
- Make a test recording before using the device to make sure that is working correctly. Please note that URMET Domus S.p.A. is not liable for loss of stored data consequent to loss or damage caused by incorrect observation installation, use, improper use or malfunctioning of the device.
- This device contains precision electronic components. Protect the device from shocks to ensure correct recording of images.

1.3.7 PRIVACY AND COPYRIGHT

- The DVR DVS digital video recorder is a device for CCTV systems. Recording of imagines is subject to the laws in force in your country. Recording of images protected by copyright is forbidden.
- Product users shall be responsible for checking and respecting all local rules and regulations concerning monitoring and recording video signals. The manufacturing SHALL NOT BE LIABLE for use of this product not in compliance with the laws in force.

1.3.8 SOFTWARE UPGRADES

- Regularly check the specific section of the manufacturer's web site at http://www.urmetdomus.it for software upgrades.

1.3.9 FIRMWARE UPGRADES

- Periodically check the URMET Domus SpA Customer Service Technical Area for firmware upgrades.

1.3.10 NETWORK INSTALLATION

- The factory default IP address of the DVR is the following: 192.0.0.64.
- Using the DVR Network OSD Menu, assign the DVR an IP address which hasn't been assigned to other devices in order to prevent any network conflict.
- After assigning a proper IP address to the DVR, it can be connected to the Network.

1.3.11 NETWORK CONNECTION

- When connecting to a remote PC (using Client Software or I.E.), remember that all video channels used by the PC correspond to a "unicast" type connection (TCP, RTP,UDP etc).
- The DVR is capable of supporting up to 24 "unicast" connections, i.e. up to 24 video channels connected in TCP, RTP, UDP.

2 DESCRIPTION OF THE PARTS

There are numerous ways to navigate and operate your DVR. You may use the **Front Panel Controls,** the included **IR (Infra-Red) Remote**, a **Mouse** and the **Soft Keyboard**.

2.1 FRONT PANEL

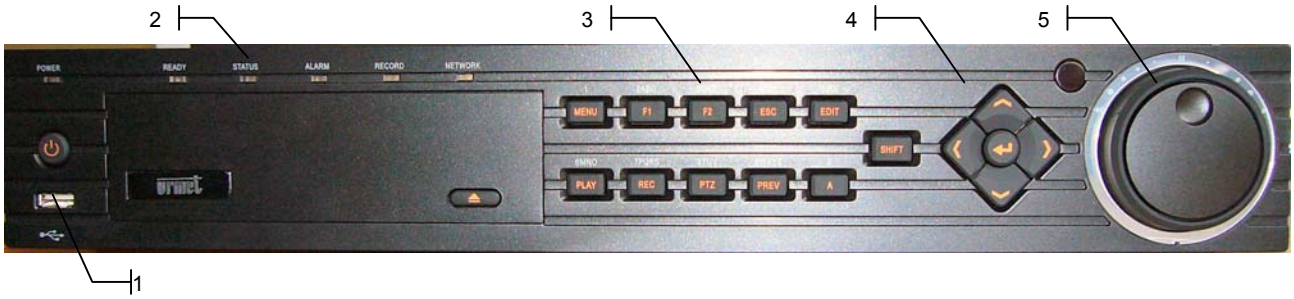

Figure 1. DVR Front Panel Controls

The controls on the front panel include:

1. **USB Ports:** Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
2. **Status Indicators:** Status indicators for different features of the DVR.
   - **Alarm:** Alarm indicator turns red when a sensor alarm is detected.
   - **Ready:** Ready indicator turns green when DVR is functioning properly.
   - **Status:** Status indicator turns green when DVR is controlled by an IR remote.
   - **HDD:** HDD indicator blinks red when data is being read from or written to HDD.
   - **NETWORK:** NETWORK indictor blinks green when network connection is functioning properly.
3. **Control Buttons:**
   - **1/MENU Button:** The 1/MENU button works as numeric [1]. Pressing this button will return the user to the Main menu (after successful login). The 1/MENU button will also bring up Sensitivity Interface settings.
   - **2ABC/F1:** The 2ABC button works as numeric [2] and letter [ABC]. When it is used in a list field will select all items on the list.
   - **3DEF/F2:** The 3DEF button works as numeric [3] and letter [DEF]. It is also used to cycle through tab pages.
   - **4GHI/ESC:** The 4GHI/ESC button works as numeric [4] and letter [GHI], it is also used to escape to the previous menu
   - **5JKL/EDIT:** The 5JKL/EDIT button works as numeric [5] and letter [JKL]. The 5JKL/EDIT button is used to edit text fields. When editing text fields, it will also function as a Backspace button to delete the character in front of the cursor. On checkbox fields, pressing the 5JKL/EDIT button will *tick* the checkbox. In Playback mode, it can be used to generate video clips for backup.
   - **6MNO/PLAY:** The 6MNO/PLAY button works as numeric [6] and letter [MNO]. It is used to enter the Playback menu. It is also used to turn audio on/off in the Playback menu.
   - **7PQRS/REC:** The 7PQRS/REC button works as numeric [7] and letter [PQRS]. It is also used to enter the Manual Record interface.
   - **8TUV/PTZ:** The 8TUV/PTZ button works as numeric [8] and letter [TUV]. It is also used to enter the PTZ Control mode.
   - **9WXYZ/PREVIEW:** The 9WXYZ/PREVIEW button works as numeric [9] and letter [WXYZ]. It is also used to switch between single screen and multi-screen mode.
   - **0/A:** The 0/A button works as numeric [0]. It is also used to switch between input methods (upper and lowercase alphabet, symbols and numeric input). It can also be used to clear entire masked areas, such as in the Motion Detection and Privacy Mask menus.
   - **SHIFT:** The SHIFT button is used for switch button action between numeric button and control button.

4. **DIRECTION/ENTER Buttons:**
   - **DIRECTION Buttons:** The DIRECTION buttons are used to navigate between different fields and items in menus. In Playback mode, the Up and Down button is used to speed up and slow down recorded video. The Left and Right button will jump 30s backward and forward in a video. In Preview mode, these buttons can be used to cycle through channels.
   - **ENTER Button:** The ENTER button is used to confirm selection in any of the menu modes. It can also be used to *tick* checkbox fields. In Playback mode, it can be used to play or pause the video. In Single Play mode, pressing the ENTER button will advance the video by a single frame.
5. **JOG SHUTTLE Control:** The JOG SHUTTLE control can be used to move the active selection in a menu. The inner ring will move the selection up and down; the outer ring will move it left and right. In the Playback mode, the outer ring is used to jump 30s forward/backward in video files. The inner ring can be used to speed up/slow down the video. In Preview mode, it can be used to cycle through different channels.
6. **POWER Button:** The POWER button is used for power on or power off the DVR.

Note: It is important to note that you must click the EDIT button on either the remote or front panel on a text field before you're able to edit its content. After you're done entering text, you must hit the ENTER button to be able to move on to the next field.

2.2 REAR PANEL

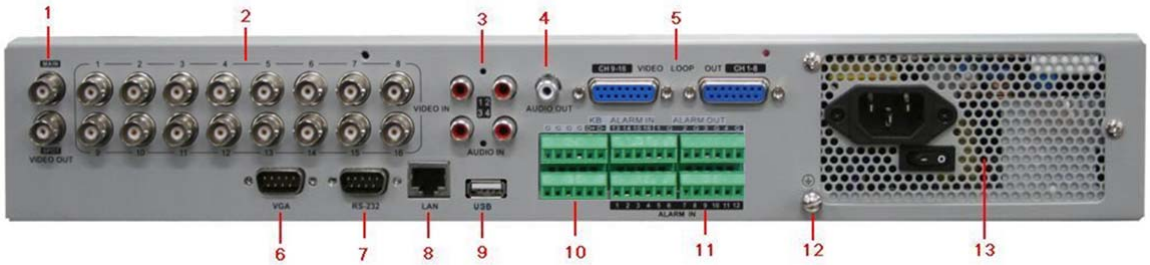

Figure 2. Rear Panel Diagram

No.	Item	Description
1	VIDEO OUT	BNC connector for video output. If VGA is connected, the interface will not function. If VGA is not connected, the interface is used as the main video output with local video display and menu operations.
	VIDEO SPOT OUT	BNC connector for monitor. Single window view.
2	VIDEO IN	BNC connectors for analog video input.
3	AUDIO IN	RCA connectors for analog audio input.
4	AUDIO OUT	RCA connector for audio output. This connector is synchronized with VIDEO OUT.
5	Video LOOP OUT	16-ch DB15 connector for video loop out
6	VGA	VGA output. Display local video output and menu.
7	RS232	DB9 connector for RS232
8	LAN Interface	Connector for LAN (Local Area Network).
9	USB Interface	Connector for USB devices.
10	RS-485 Interface	Connector for RS-485 devices. T+, T- pin connects to PTZ. Connector for KB devices. D+, D- pin connects to special keyboard.
11	ALARM IN	Connector for alarm input.
	ALARM OUT	Connector for alarm output.
12	GROUND	Ground(needs to be connected when DVR startup)
13	POWER	AC 100~240V

2.3 IR REMOTE CONTROL

Figure 3. IR remote control

The keys on the remote control closely resemble the ones found on the front panel. Referring to Figure 3, they include:

1. **POWER Button:** Power off DVR.
2. **DEV Button:** Enables/Disables Remote Control.
3. **Alphanumeric Buttons:** Same as Alphanumeric buttons on front panel.
4. **EDIT Button:** Same as EDIT button on front panel.
5. **A Button:** Same as A button on front panel.
6. **REC Button:** Same as REC button on front panel.
7. **PLAY Button:** Same as PLAY button on front panel.
8. **INFO Button:** Reserved.
9. **VOIP Button:** Reserved.
10. **MENU Button:** Same as MENU button on front panel.
11. **PREV Button:** Same as PREV button on front panel.
12. **DIRECTION/ENTER Buttons:** Same as DIRECTION/ENTER buttons on front panel.
13. **PTZ Button:** Same as PTZ button on front panel.
14. **ESC Button:** Same as ESC button on front panel.
15. **RESERVED:** Reserved.
16. **F1 Button:** When it is used in a list field will select all items on the list.
17. **PTZ CONTROL Buttons:** Buttons to adjust the iris, focus and zoom of a PTZ camera.
18. **F2 Button:** It is also used to cycle through tab pages.

2.3.1 BATTERIES

The remote control is powered by two size AAA batteries (included). To install, open the battery compartment cover and insert in the compartment respecting the polarity shown. Close the cover after inserting the batteries. Point the remote control towards the DVR receiver to use it.

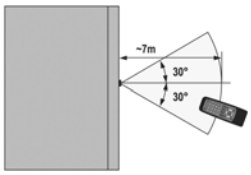

Dispose of used batteries properly. Do not litter.

2.4 MOUSE

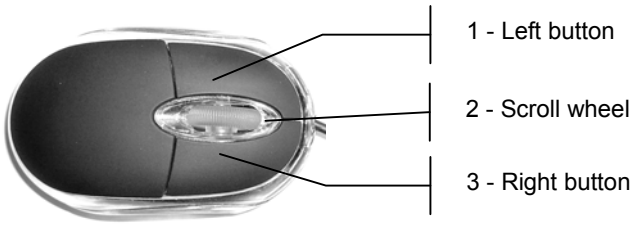

Figure 4. mouse and control buttons (picture as indication only)

A regular 3-button (Left/Right/Scroll-wheel) USB mouse can also be used with this DVR. To use a USB mouse:

1. Plug USB mouse into one of the USB ports on the front panel of the DVR.
2. The mouse should automatically be detected. If in a rare case that the mouse is not detected, please refer to the recommended device list from your provider.

The buttons on the mouse corresponds to:

1. **Left Button:**
   - **Single-Click:** Select a component of a menu, such as a button or an input field. This is similar to pressing the ENTER button on the remote/front panel controls.
   - **Double-Click:** Switch between single screen and multi-screen mode in Preview mode.
   - **Click and Drag:** Clicking and dragging the Left mouse button can be used to control the pan/tilt of a PTZ camera as well as to vary the position of digital zoom area and camera OSD. It can also be used to setup the alarm areas.
2. **Scroll-Wheel:**
   - **Scroll Up:** In Preview mode, scrolling up will switch to the previous screen. In Menu mode, it will move the selection to the previous item.
   - **Scroll Down:** In Preview mode, scrolling down will switch to the next screen. In Menu mode, it will move the selection to the next item.
3. **Right Button:**
   - **Single-Click:** Shows pop-up menu.

2.5 USING THE SOFT KEYBOARD

When a mouse is used to perform task on the DVR, clicking on a text input field will bring up the Soft Keyboard, shown in Figure 5.

Figure 5. Soft Keyboard

The buttons on the soft keyboard represents:

Lowercase: Designates lowercase input is being used.

Uppercase: Designates uppercase input is being used.

Switch to Lowercase: Switch to lowercase input.

Switch to Uppercase: Switch to uppercase input.

Number: Designates number input is being used.

Symbols: Switch to symbols input.

Backspace: Delete the character in front of the cursor.

Enter: Confirm selection.

ESC: Exit out of Soft Keyboard.

Figure 6. Soft Keyboard Buttons

3 PRODUCT APPLICATION DIAGRAM

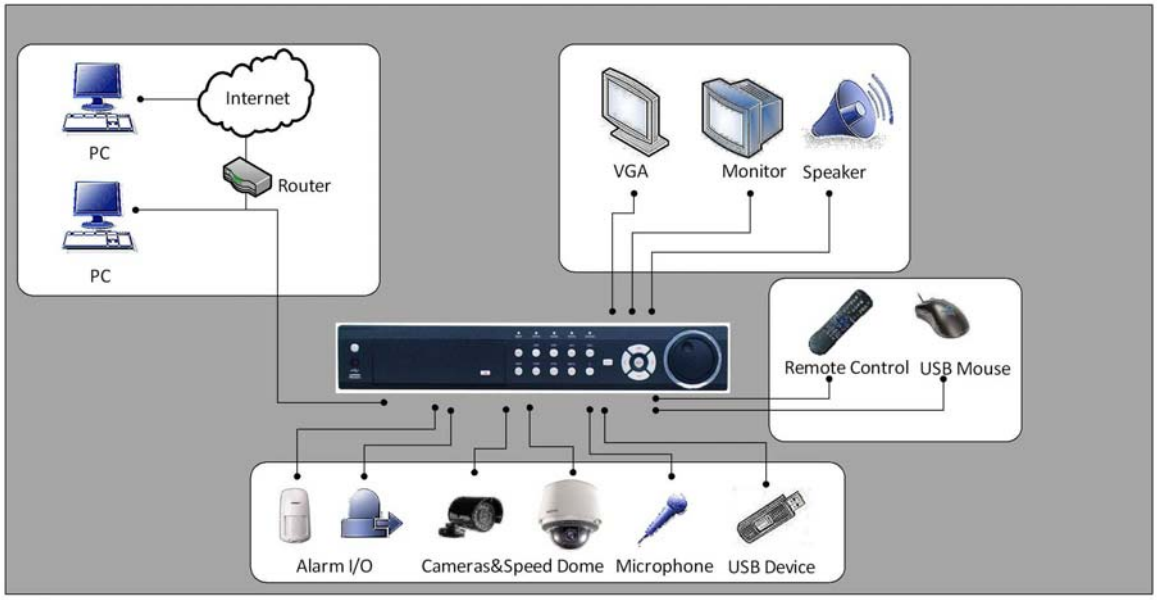

Figure 1. Product Application Diagram

4 GENERAL SETTINGS

Proper startup and shutdown procedures are crucial to expanding the life of your DVR.

4.1 SWITCH-ON

To startup your DVR:

1. Ensure the power supply is plugged into an electrical outlet. It is HIGHLY recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the unit.
2. Turn on the switch on rear panel
3. After startup, the Status indicator LED will remain green.

4.2 HOW TO SWITCH THE DEVICE OFF

There are two proper ways to shut down DVR:

4.2.1 SHUTDOWN IN MENU

1. Enter the Shutdown menu, shown in Figure 1 by clicking on Menu > Shutdown.

Figure 1. Shutdown Menu

2. Select the Shutdown button.
3. Turn off switch on rear panel.

4.2.2 MANUAL SHUTDOWN

1. Press and hold the POWER button for 3 seconds.
2. Enter the administrator's username and password in the dialog box for authentication.
3. Click the Yes button.
4. Message "Are you sure to turn off DVR?" will popup.
5. Click "Yes" then message "Shutting down" will pop up.
6. Turn off switch on rear panel.

4.3 REMOTE CONTROL ENABLE

Aim the remote control at the IR receiver located at the front of the unit to test operation. If there is no response:

2. Using the front control panel or the mouse, go into Menu > Settings > General > More Settings.
3. Check and remember DVR ID#. The default ID# is 255. This ID# is valid for all IR controls.
4. Press the DEV button on the remote.
5. Enter the DVR ID# from step 2.
6. Press the ENTER button on the remote.

If the Status indicator on the front panel turns blue, the remote control is operating properly. If the Status indicator does not turn blue and there is still no response from the remote, please check the following:

1. Batteries are installed correctly and the polarities of the batteries are not reversed.
2. Batteries are fresh and not out of charge.
3. IR receiver is not obstructed.

4.4 REBOOTING AND LOCKING YOUR DVR

While in the Shutdown menu (Figure 1), you may also reboot or lock your DVR. Locking your DVR will return you to the Live Preview mode, which will require an user name and password to exit out of it. The Reboot button will reboot your DVR.

To reboot or lock your DVR:

1. Enter the Shutdown menu by clicking Menu > Shutdown.
2. Select the Lock button to lock the DVR or the Reboot button to reboot the DVR.

4.5 USING THE SETUP WIZARD

By default, the Setup Wizard will start once the DVR has loaded, as shown in Figure 2. The Setup Wizard will walk you through some of the more important settings of your DVR. If you do not wish to use the Setup Wizard at this time, click the Cancel button. You may also choose to use the Setup Wizard at a later time by leaving the **"Start Wizard when DVR starts?**" checkbox checked.

Figure 2. Setup Wizard

To start using the Setup Wizard:

1. Click the Next button on the Wizard window. This will take you to the **User Permission** window, shown in Figure 3.

Figure 3. User Permission

2. Navigate to the **Admin Password** input field.
3. Enter the admin password into the **Admin Password** input field. By default, the password is 12345.
4. To change the admin password, check the **New Admin Password** checkbox. Enter the new password and confirm the password in the given fields.
5. Click the Next button. This will take you to the **HDD Management** window, shown in Figure 4.

Figure 4. HDD Management

6. To start HDD management, click the Enter button.
7. If a new HDD was recently installed, select the HDD from the list to initialize it. Initializing the HDD will format and remove all data from it.
8. After the HDD has been initialized, click the OK button which will take you back to the Setup Wizard window.
9. Click the Next button. This will take you to the **Record Settings** window, as shown in Figure 5.

Figure 5. Record Settings

10. To enter the **Record Settings** window, click the Enter button.

11. Select the **Schedule** tab, shown in Figure 6.

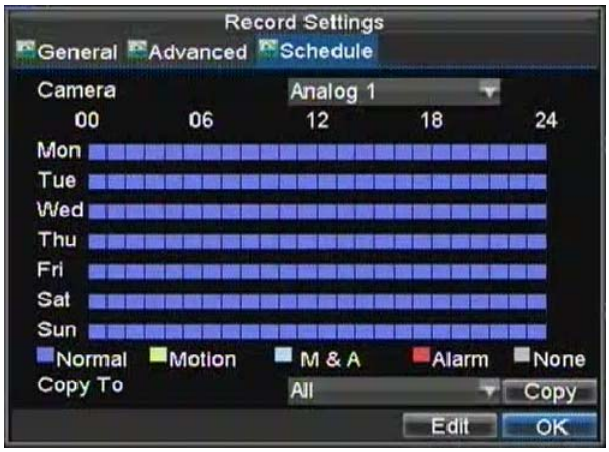

Figure 6. Schedule Settings

12. Click the Edit button. This will open up a new recording schedule, shown in Figure 7.
13. Check both the **Enable Schedule** and **All Day** checkbox. This will enable the recording schedule and have it record continuously all day.

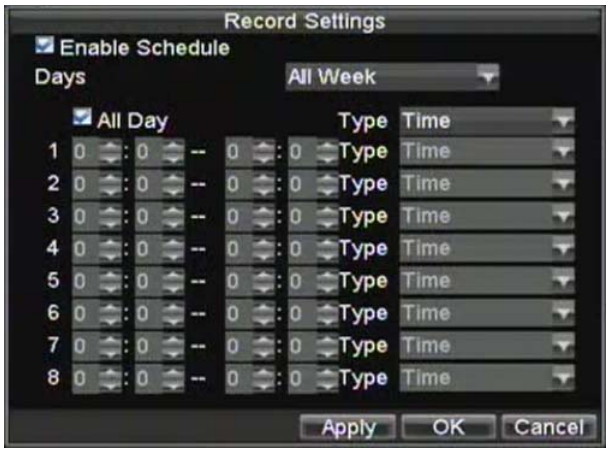

Figure 7. Edit Schedule Settings

14. Click the OK button. This will take you back to the **Schedule** tab. To copy the schedule to a different channel, select the channel or all under **Copy To** and click the Copy button.
15. Click the Next button. This will take you to the **Network Settings** window, shown in Figure 8.

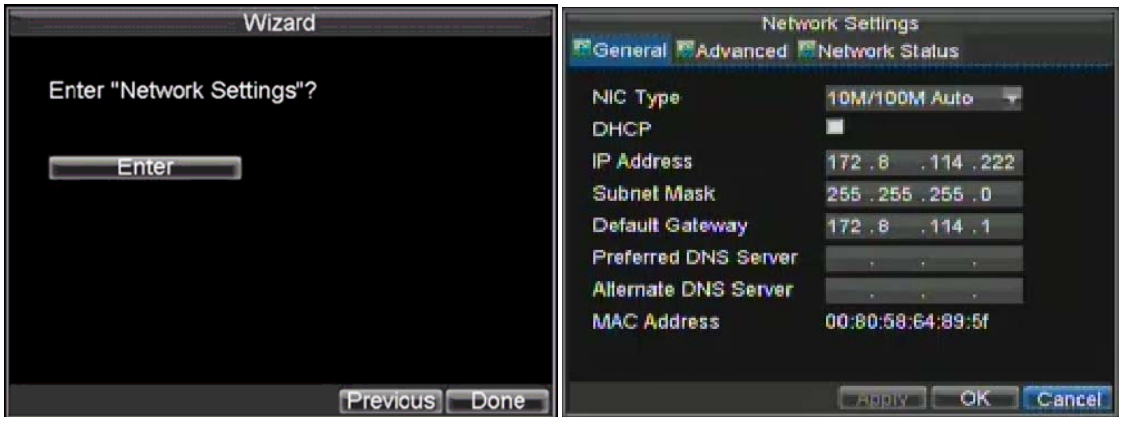

Figure 8. Network Settings

16. To configure network settings, click the Enter button.
17. Enter the **IP Address**, **Subnet Mask** and **Default Gateway**.
18. Click the OK button to return to the Setup Wizard.
19. If all the settings are entered as desired, click the Done button to finish and exit the Setup Wizard.

Congratulations! You've completed the Setup Wizard. The next step in the initial setup process is to setup the system date and time.

4.6 SETTING DATE & TIME

It is extremely important to setup the system date and time to accurately timestamp recordings and events.

To setup date and time:

1. Open the Menu window by clicking the MENU button on the remote or front panel. You can also go to the Menu window by right clicking with the mouse and clicking the Menu button.
2. Click the Setting icon.
3. Click the General icon. You will be taken to the General Settings window, as shown in Figure 9.

Figure 9. General Settings

4. Enter the correct date and time under **System Time**.
5. Click the Apply button to save the settings.

5 WATCHING A LIVE PREVIEW

The Live Preview mode is automatically started after the DVR boots up. It is also at the very top of the menu hierarchy, thus hitting the ESC multiple times (depending on which menu you're on) will bring you to the Live Preview mode.

5.1 UNDERSTANDING LIVE PREVIEW ICONS

There are multiple icons on each display in Live Preview mode to indicate different camera status. These icons include:

Event Icon: Indicates video loss or tampering, motion detection and/or sensor alarm.

Record Icon: Indicates the current channel is recording. The recording may have been started manually, from a schedule, and/or triggered from motion or alarm.

Figure 1. Live Preview Icons

5.2 OPERATING THE LIVE PREVIEW

In Live Preview mode, you can:

1. **Display Single Camera:**
   - **Using Front Panel/Remote:** Use Alphanumeric buttons.
   - **Using Mouse:** Select Single Camera in right-click menu.
2. **Preview Layout Switch:**
   - **Using Front Panel/Remote:** Click PREV button.
   - **Using Mouse:** Select Multi-Camera in right-click menu.
3. **Manual Switch:**
   - **Using Front Panel/ Remote:** To move to the previous screen, click the Left direction button. To move to the next screen, click the Right direction button.
   - **Using Mouse:** Select Next screen in right-click menu.
4. **Auto Switch:**
   - **Using Front Panel/Remote:** Click ENTER button.
   - **Using Mouse:** Select Start Sequence in right-click menu.
5. **Digital Zoom:**
   - **Using Mouse:** Select Digital Zoom in right-click menu.

5.3 USING THE MOUSE IN LIVE PREVIEW

Many features of the Live Preview can be quickly accessed by clicking the right-button of the mouse (shown in Figure 2). These features include:

- **Single Camera:** Switch to a full screen display of the selected camera. Camera can be selected from a drop down list.
- **Multi-Camera:** Switch between different display layout options. Layout options can be selected from a drop down list.
- **Next Screen:** When displaying less than the maximum number of cameras in Live Preview, clicking this feature will switch to the next set of displays.
- **Playback:** Enter into Playback mode.
- **PTZ:** Enter PTZ Control mode.
- **Digital Zoom:** Enter Digital Zoom interface.
- **Menu:** Enter Main menu.
- **Start Auto-switch:** Enable sequencing in Live Preview mode.

Note: The *dwell time* of the preview configuration should be set before using **Start Auto-switch**.

Figure 2. Live Preview Mouse Menu

5.4 USING DIGITAL ZOOM

To use digital Zoom in Live Preview mode:

1. Right-click using the mouse in Live Preview mode.
2. Select Digital Zoom from Mouse menu.
3. Left-click and drag the red box to the desired area for zoom. The zoomed image will be magnified by 4 times. A sample of this can be seen in Figure 3.

Figure 3. Digital Zoom

5.5 CONFIGURING LIVE PREVIEW DISPLAYS

Live Preview displays can be customized to your own needs. These settings can be accessed by entering the Display Settings menu.

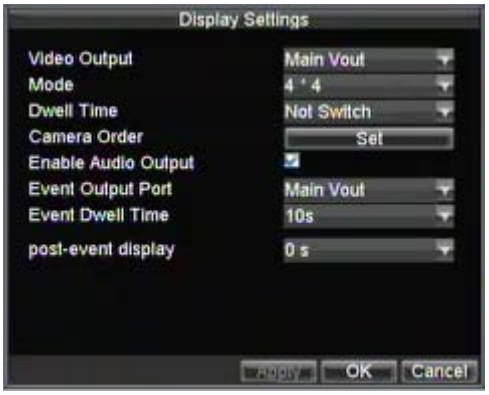

Figure 4. Display Settings

Note: Spot out only has a window division.

To access the Display Settings menu:

1. Click the MENU button.
2. Click the Setting icon.
3. Click the Display icon.

The settings available in this menu include:

- **Video Output:** Designates the output to configure the settings for. Outputs include Main Vout and Auxiliary Vout.
- **Mode:** Designates the display mode to be use for Live Preview (Spot out only one window).
- **Dwell Time:** The time in seconds to *dwell* between switching of channels when **Start Sequence** is selected in Live Preview.
- **Camera Order:** The order of the cameras to be used in the selected display mode (See ***Setting Camera Order***).
- **Enable Audio Output:** Enable/disable audio output for the selected video output.
- **Event Output Port:** Designates the output to show event video on.
- **Event Dwell Time:** The time in seconds to show event screen.
- **Post Event Display:** It is now possible to set for how long the event channel (Motion Detection, Alarm, Video Loss, Tampering) will be displayed in full screen on the alarm monitor even after the event has stopped (post event display). It is possible to define the duration in the range 0s - 30s.

Note: DVR will automatically detect if a VGA display is connected. If VGA is connected, main CVBS won't show you any image. If VGA is not connected, main CVBS will show you main GUI.

Note: VGA can't work together with Main CVBS

5.6 SETTING CAMERA ORDER

Setting the camera order allows you to logically position cameras for more efficient monitoring of your own individual location.

Note: Spot out only has one window division

Figure 5. Camera Order Setting

To set the camera order:

1. Enter the Display Settings menu, shown in Figure 5 (Menu > Setting > Display).
2. Click the Set button.
3. Select the display mode you would like to set the camera order for under **Mode**.
4. Using the up and down button at each display, select the camera you would like to set. Setting an 'X' will mean the camera will not be displayed.
5. Click the OK button.

6 CONFIGURING SETTINGS FOR RECORDING

There are multiple ways to setup your DVR for recording. They include setting up a recording schedule, triggering a recording by motion detection and/or a sensor alarm, and manually starting the recording.

6.1 INITIALIZING RECORD SETTINGS

Before setting your DVR up for recording, certain settings should be configured first. The steps to configuring these settings are:

1. If you have not initialized a HDD either through the Setup Wizard or through HDD management, you must do so before proceeding.
2. Navigate to Menu > Setting > Record. You will be taken to the Record Settings menu, shown in Figure 1.

Figure 1. General Record Settings

3. Select the camera you would to configure the settings for.
4. Configure settings for:
   - **Encoding Parameters:** Select the encoding parameters, either Normal or Event.
   - **Stream Type:** Type of stream to record, either video & audio(only available for first 4-ch) or video.
   - **Resolution:** Select the resolution of the recording. The options include 4CIF, 2CIF, CIF and QCIF.
   - **Bit Rate Type:** Select either Variable or Constant bit rate.
   - **Video Quality:** Select the quality to record cameras at.
   - **Frame Rate:** Select recordings frame rate.
   - **Max Bit Rate:** Select or define custom maximum bit rate for recordings.
5. Click the Set button under **More Settings**. This will bring up another menu with more advance recording options, as shown in Figure 2.

Figure 2. Additional Record Settings

6. Set additional record settings:
   - **Pre-Record:** Sets the time in seconds to pre-record before the actual recording begins.
   - **Post-Record:** Sets the time in seconds to post-record after the actual recording has ended.
   - **Recording Expired Time:** Sets the expiration time in days for recorded video. Recordings after expiration time would be deleted. If it's set to '0,' the option would be disabled.
   - **Redundantly Record:** Select to enable or disable redundant recording on the particular channel.
   - **Record Audio:** Select to record audio of the camera or not.
7. Click the OK button to finish and return to the previous menu.
8. Select the **Advanced** tab, this will open the Advanced settings menu, shown in Figure 3.
9. Enable or disable the **Overwrite** setting. Enabling the **Overwrite** setting will cause recorded files to be overwritten once the HDD is full.
10. Click Apply and then the OK button.

Figure 3. Advanced Record Settings

6.2 SCHEDULING A RECORDING

Scheduling a recording allows you to setup the DVR to only record when you want it to.
To setup a recording schedule:

1. Enter the Record Settings menu (Menu > Setting > Record).
2. Select the **Schedule** tab to open the Schedule menu, shown in Figure 4.

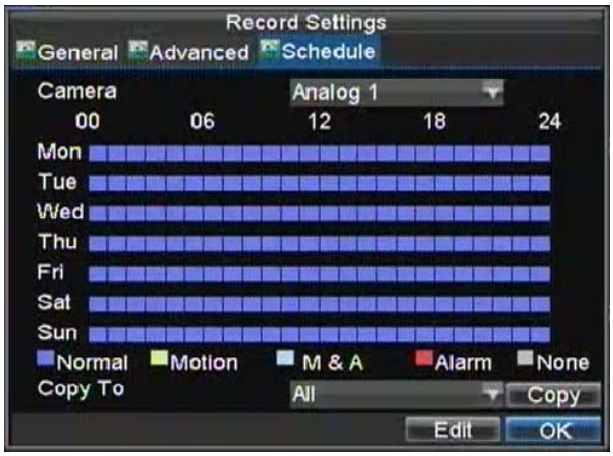

Figure 4. Schedule Settings

3. Select Camera to edit schedule for.
4. Click the Edit button.
5. Click and check **Enable Schedule**.
6. Select the day you would like to setup the schedule for or select All Week to record the entire week.
7. Select to record the entire day by clicking **All Day** or at different time periods. Up to 8 time periods can be scheduled. It is important to note that time periods cannot be overlapped.

8. Select recording **Type**. Recording type can be based on time and triggered by motion detection and/or alarm. Motion detected and alarm triggered recordings are further explained in ***Configuring Alarms***.
9. Click the OK button to finish configuration.
10. Repeat steps 3-9 for other cameras or copy settings from one schedule to the next under the **Copy To** section.
11. Click OK to finish and save the schedule settings.

Note: **Event** encoding parameters will take effect when motion detection or alarm happens. **Normal** encoding parameters will take effect when there are no events happening.

6.3 STARTING A MANUAL RECORDING

A manual recording can be started at any time. To start a manual recording:

1. Press the REC/SHOT button on the front panel or in the Main menu to bring up the Manual Record menu (shown in Figure 5).

Figure 5. Manual Record Menu

2. Start manual recording by selecting On or Off for the cameras desired.

6.4 PROTECTING RECORDED FILES

There are two methods to prevent recorded files from being deleted off the HDD. It's highly recommended that important recorded events be protected from deletion. Recorded files can either be *locked* or the HDD that the files reside on can be set to *read only*.

6.4.1 LOCKING AND UNLOCKING RECORDED FILES

To lock or unlock a recorded file:

1. Enter the Video Search menu by navigating to Menu > Video Search. The Video Search menu is shown in Figure 6.

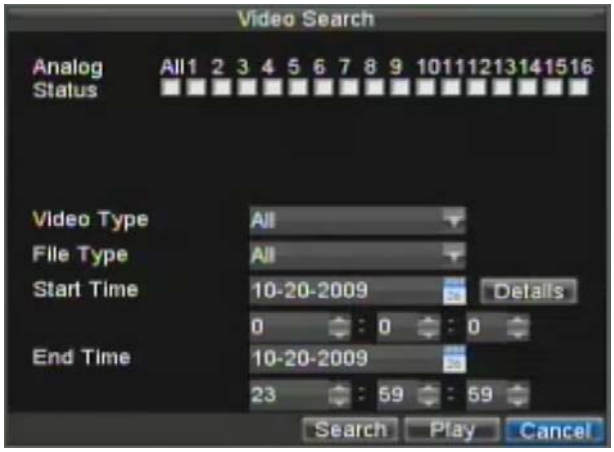

Figure 6. Video Search Menu

2. Search for desired recording by entering search parameters. Search parameters include Camera #, Video/File Type, and Start/End Time.
3. Click the Search button. A list of recordings (similar to Figure 7), matching the search parameters will be displayed.
4. Select the file you would like to lock/unlock.
5. Click on the Lock button to lock file. If the file is already locked, click on the Unlock button to unlock file. Locked files will be shown with a closed lock while unlocked files, opened lock.
6. Click Cancel to exit out of the Video Search menu.

Figure 7. Video Search Result List

6.4.2 SETTING HDD TO READ-ONLY

To set a HDD to read-only:

1. Navigate to the HDD Management menu by going to Menu > HDD Management. The HDD Management menu is shown in Figure 8.

Figure 8. HDD Management Menu

2. Select the **General** tab.
3. Select the HDD to set to read-only.

4. Click the Property button. This will take you to the Property Settings menu, shown in Figure 9.

Figure 9. HDD Property Settings Menu

5. Set HDD to Read-Only.
6. Click the OK button. The HDD is now read-only.

Note: When a HDD is set to *read-only*, no more recordings can be written to the disk. In order to enable recordings on that particular disk again, you must set the HDD to R/W (Read/ Write) in the HDD Property Settings menu. If multiple HDDs are used, the DVR will automatically record to the next HDD that is not set to *read-only*.

6.5 CONFIGURING ADVANCED HDD SETTINGS

6.5.1 SETTING UP HDD REDUNDANCY

To insure unexpected failures of hard disk drives, it's recommended to set up HDD redundancy. It is important to note that in order to set up HDD redundancy, you'll need more than one HDD in your DVR.

To set up HDD redundancy:

1. Navigate to the HDD Management menu by clicking Menu > HDD management.
2. Click on the **General** tab.
3. Select the HDD to be used for redundancy, as shown in Figure 10.

Figure 10. HDD Management Menu

4. Click the Property button. This will take you to the Property Settings menu.
5. Set **HDD Status** to Redundancy, shown in Figure 11.
6. Verify at least one other HDD is set to R/W (read/write).

7. Click the OK button to save settings and return to the previous menu.

Figure 11. HDD Property Settings

7. Navigate to the Record Settings menu by clicking Menu > Setting > Record Setting.
8. Click on the **General** tab.
9. Select the **Camera** to be used for redundancy.
10. Next to **More Settings**, click on the Set button. This will bring up additional settings for the selected camera (shown in Figure 12).

Figure 12. Additional Record Settings

11. Set **Redundantly Record** to Yes.
12. Click the OK button to save settings.
13. Repeat steps 8-12 for other cameras you would like to redundantly record.

7 PLAYING BACK A RECORDING

You must first search for recordings to play them back. There are multiple ways to search for recordings, including searching for them by time, by channel, by file type and by log.

7.1 UNDERSTANDING THE PLAYBACK INTERFACE

There are various controls on the Playback interface that makes viewing recordings more efficient. A screenshot of the Playback interface is shown below in Figure 1.

Figure 1. Playback Interface

The Playback Control Panel, shown in Figure 2 contains the various controls on the Playback interface.

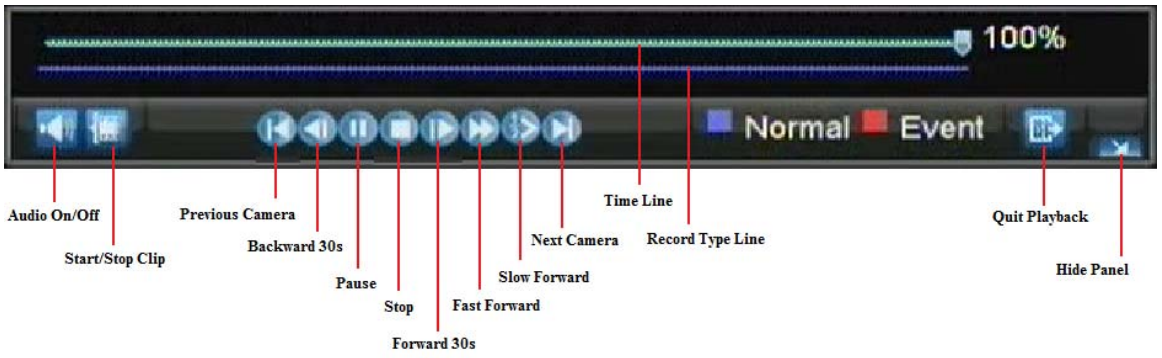

Figure 2. Playback Control Panel

Note: A blue Record Time Line designates schedule/manual recording while a red one shows event recordings.

7.2 PLAYING BACK FROM SEARCH

To playback files from a video search:

1. Enter into the Video Search menu by clicking Menu > Video Search.
2. Set the search parameters by selecting cameras to search, video/file type and the start/end time (as shown in Figure 3).

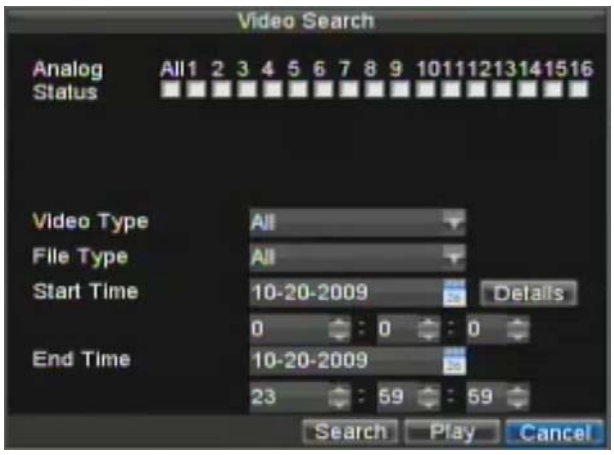

Figure 3. Video Search Menu

3. Click the Play button to start playback of all the files found with the specified search criteria or click the Search button to bring up the list of search results. After search results are presented, select the file you would like to playback and press Play.
4. Recordings will automatically be play backed in the Playback interface, shown in Figure 4.

Figure 4. Playback Interface

7.3 PLAYING BACK FROM LIVE PREVIEW

You may also instantly playback from a channel while watching a Live Preview. The playback will be of recordings from the past 5 minutes.

To playback from a channel instantly in Live Preview:

- **Using a Mouse:**
  1. Right-click the mouse on desired channel and select the Playback button.
  2. Recordings from the selected channel will start playing back in the Playback interface. An *Attention* message will appear if there are no recordings found from the previous 5 minutes. You may also press the Play button to view the day's recording for the selected channel.
  3. You may also select additional channels for playback from the channel list on the right hand side of the Playback interface, as shown in Figure 5.

Figure 5. Playback Interface

- **Using the Front Panel/Remote:**
  1. Press the PLAY button. This will take you into the Playback interface.
  2. Enter the channel you would like to watch recordings for on the front panel or remote (i.e. press '0'then'4' for channel 04).
  3. Recordings will begin for the selected channel.

7.4 PLAYING BACK FROM SYSTEM LOG

You may also playback recordings from the System Log.
To playback video from the System Log:

1. Enter the Log Search menu by clicking Menu > Maintenance > Log Search (shown in Figure 6).

Figure 6. Log Search Menu

2. Set **Major Type** setting to *Information*.
3. Set **Minor Type** setting to *Start Record* or *End Record*.
4. Set **Start Time** and **End Time**.
5. Click the Search button.
6. A list of results with your search criteria will be returned. Select the video log to playback and click Play.
7. The recording will begin to play in the Playback interface.

7.5 PLAYING BACK FRAME-BY-FRAME

To playback frame-by-frame in the Playback interface:

- **Using a Mouse:**
  1. Click the Slow Forward button on the Playback Control Panel until the speed changes to *Single* frame.
  2. Click the Pause button to advance the video frame by frame.
- **Using the Front Panel/Remote:**
  1. Rotate the inner control on Jog Shuttle counterclockwise or press the Down button to set the play to *Single* frame.
  2. Press the OK button.
  3. Press the Enter button to advance the video frame by frame.

7.6 USING DIGITAL ZOOM

To use digital zoom in Playback mode:

1. Enter Digital Zoom mode by right-clicking with the mouse in Playback and selecting Zoom.
2. Left-Click and drag red box for desired magnification area, as shown in Figure 7. The selected area will be zoomed to full screen.

Figure 7. Digital Zoom Area Selection

8 BACKING UP RECORDED FILES

Recorded files can be backed up to various devices, such as USB flash drives, USB HDDs or a DVD writer.

8.1 EXPORTING FILES

To export recorded files:

1. Enter the Export Video menu (shown in Figure 1) by clicking Menu > Video Export.

Figure 1. Export Video Menu

2. Select desired parameters to search for files to export.
3. Press the Export button. This will take you to the Video Search menu.
4. Select the files to export, as shown in Figure 2. You may also click the Play button to verify that these files are indeed the ones you would like to export.

Figure 2. Video Search Results

5. The size of the currently selected files is displayed in the lower-left corner of the window. Select the Next button to enter the Export menu, shown in Figure 3.

Figure 3. Export Menu

6. Select device to export to from drop-down list (USB Flash Drive, USB HDD, DVD Writer). If backup device is not recognized:
   - Click the Refresh button.
   - Reconnect device.
   - Check for compatibility from vendor.
7. Click Start to begin backup process, shown in Figure 4.

Figure 4. Backup Progress

8. After the backup process has completed (Figure 5), you may select the files from your device and click the Play button to verify that it has been exported successfully.

Figure 5. Export Successful Screen

Note: Video Player software will automatically be copied on to the device that the recorded files were exported on.

8.2 EXPORTING VIDEO CLIPS

You may also select video clips to export directly during Playback. A maximum of 30 clips can be selected for each channel.

To export video clips during Playback:

- **Using the Mouse:**
  1. Enter into the Playback interface (See ***Playing Back a Recording***).
  2. Using the Clip Start/Stop button in the Playback Control Panel, select the start and end of the video clip during playback.
  3. Repeat for additional clips.
  4. Click the Quit Playback button to exit from the Playback interface. You'll then be prompted to save the clips, as shown in Figure 6.

Figure 6. Video Clips Save Prompt

  5. Click the Yes button to enter Backup interface or select No to exit to Playback interface.
  6. At the Backup interface, select the Start button to begin the Backup process.
- **Using the Front Panel / Remote:**
  1. Enter into the Playback interface (See ***Playing Back a Recording***).
  2. During playback, press the EDIT button to mark start of clip.
  3. Press the EDIT button again to mark end of clip.
  4. Repeat for additional clips.
  5. Press the ESC button to exit from the Playback interface. You'll then be prompted to save the clips, as shown in Figure 6.
  6. Click the Yes button to enter Backup interface or select No to exit to Playback interface.
  7. At the Backup interface, select the Start button to begin the Backup process.

8.3 MANAGING BACKUP DEVICES

To manage backup devices, you must first be in the Export menu, shown in Figure 7. The Export menu can be accessed by following the steps shown in the previous section (See ***Exporting Files***).

Figure 7. Export Menu

Once in the Export menu, you may:

- **Create New Folder:** Creates a new folder on the export device.
- **Delete:** Delete a file or folder from the export device.
- **Play:** Play the selected video file from the export device.
- **Format:** Format the export device.
- **Erase:** Erase files from a re-writable CD/DVD.

9 CONFIGURING ALARMS

9.1 SETTING UP MOTION DETECTION

Set up properly, using motion detected recording will increase the number of days your DVR is able to record. It will only record relevant events rather than recording everything, making searching for an event easier.

To set up motion detection:

1. **Enter Camera Setting:**

   Enter the Camera Settings interface by navigating to Menu > Setting > Camera. Select channel to configure motion detection on.

2. Select the **Advanced** tab to open up the Advanced Camera Settings menu, shown in Figure 1.

Figure 1. Advanced Camera Settings

3. Check the checkbox next to Video Motion Detection.
4. Click the Area Settings button to enter the Motion Detection area and Sensitivity configuration interface.
5. The Motion Detection area, shown in Figure 2, allows you to mask out areas where you would like motion to be detected in. The maximum area is the whole screen. Mask the Motion Detection area.

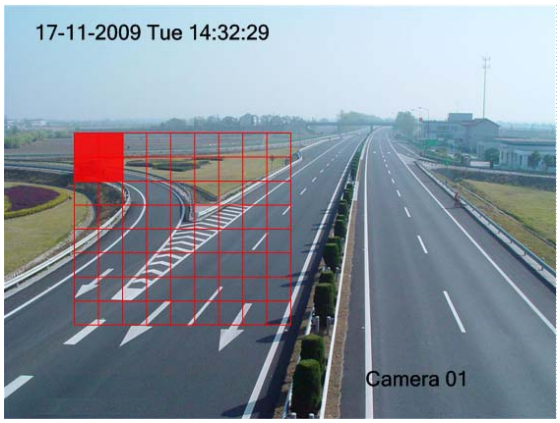

Figure 2. Motion Detection Area

6. Set the Motion Detection Sensitivity, shown in Figure 3. The higher the sensitivity value, the higher the sensitivity.

Figure 3. Motion Sensitivity Setting

7. Click OK to return to the Camera Settings menu.
8. Click the Handle button to open the Exception Handle menu, shown in Figure 4. Select the Triggered Camera tab

.

Figure 4. Exception Handle Menu

9. Select cameras to trigger for recording when motion is detected by checking the checkboxes under the desired cameras.
10. Click OK to complete motion settings for the selected camera.

You may now add a schedule to start recording when motion is detected (See ***Scheduling a Recording***).

9.2 SETTING UP SENSOR ALARMS

Recordings can also be triggered from an external sensor alarm device. To setup sensor alarms:

1. Enter into the Alarm Management menu by navigating to Menu > Setting > Alarm, shown in Figure 5.

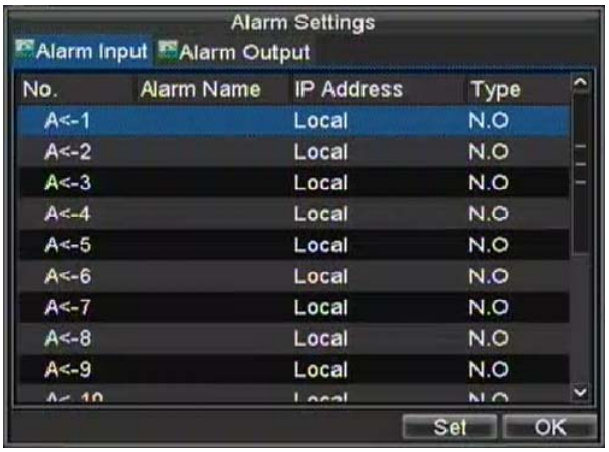

Figure 5. Alarm Management Menu

2. Select the **Alarm Input #** and click the Set button. This will open the Alarm Input Setting menu, shown in Figure 6.

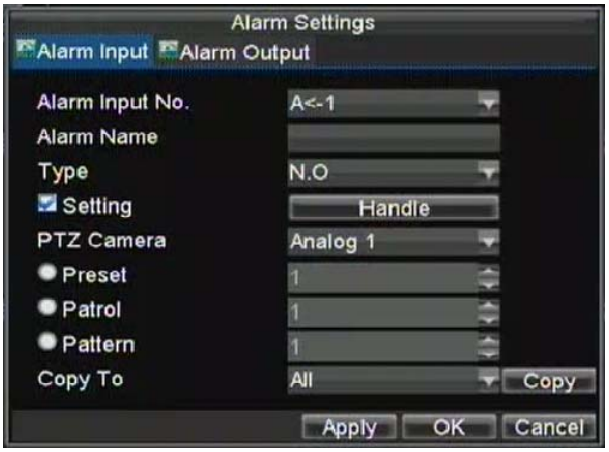

Figure 6. Alarm Management Settings

3. Set the alarm input type under **Type**. The options available are Normally Opened (N.O.) and Normally Closed (N.C.).
4. Check the checkbox next to **Setting** and click the Handle button to enter the Alarm Input Handle menu.
5. Select the **Triggered Camera** tab.

6. Select cameras to trigger for recording when alarm occurs by checking the checkboxes under the desired cameras, as shown in Figure 7.

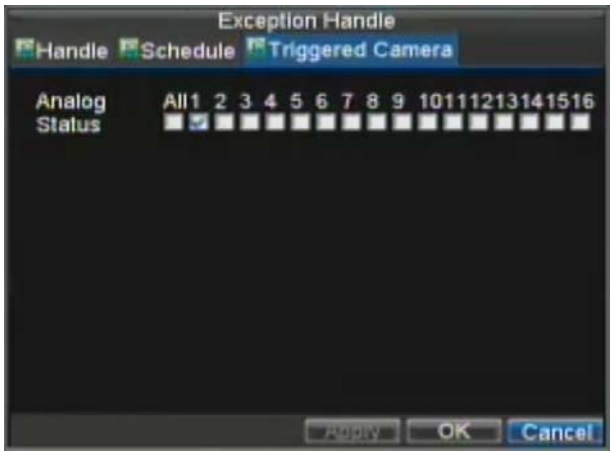

Figure 7. Triggered Cameras Menu

7. Click the OK button to complete setup.

You may now add a schedule to start recording when an alarm is triggered (See ***Scheduling a Recording***).

Alarm outputs may also be configured in the Alarm Management menu. To set up Alarm Output:

1. Select the **Alarm Output** tab. This will bring up the Alarm Output interface, shown in Figure 8.

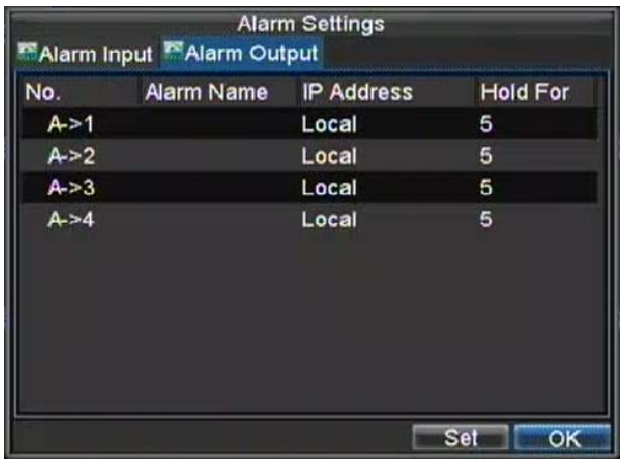

Figure 8. Alarm Output Interface

2. Select the output you would like to configure and click the Set button. This will bring up the settings page for the selected channel (Figure 9).

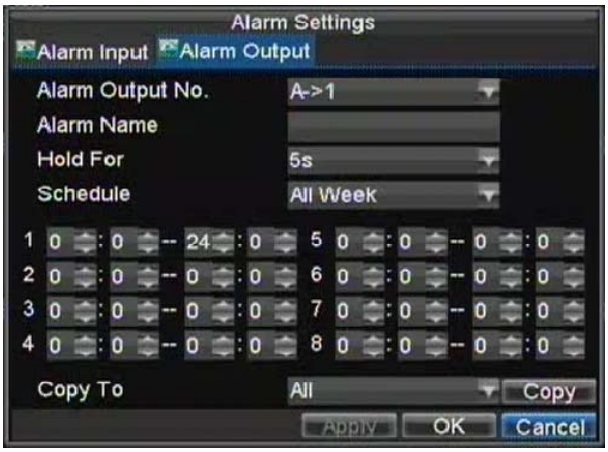

Figure 9. Alarm Output Settings

3. Configure the settings for selected output.
4. Select OK to save and exit.

Note: If the **Hold For** option is selected as *Manually Stop*, the alarm will only stop when you manually stop it (See ***Triggering Alarm Outputs Manually***).

9.3 TRIGGERING ALARM OUTPUTS MANUALLY

You may also trigger alarm outputs manually through the Manual Alarm menu.

To trigger alarm outputs manually:

1. Enter the Manual Alarm menu (Figure 10) by clicking Menu > Manual Alarm.

Figure 10. Manual Alarm Menu

2. In the Manual Alarm menu, you may:
   - **Trigger:** Select an alarm from the list and click Trigger to trigger its output.
   - **Trigger All:** Trigger all alarm outputs at once.
   - **Clear All:** Stop all alarm outputs at once.
3. Select OK to return to the previous menu.

9.4 DETECTING VIDEO LOSS

Your DVR can be setup to detect video loss and trigger an action. To setup video loss detection:

1. Enter Camera Settings menu by clicking Menu > Setting > Camera.
2. Select camera under **Channel #** to configure video loss detection for and click the Set button.
3. Select the **Advanced** tab.
4. Check the **Video Loss Detection** checkbox to enable feature, as shown in Figure 11.

Figure 11. Camera Settings Menu

5. Click the Handle button to enter the Exception Handle menu, shown in Figure 12.
6. Select the **Handle** tab to configure exceptions handling. Exception trigger options are further explained in the next section (See ***Understanding Exception Trigger Options***).

Figure 12. Exception Handle Menu

7. Select the **Schedule** tab. Set the schedule of when you want video loss detection to be enabled. Schedule can be set for all week or any day of the week with up to 8 time periods per day.
8. Click the Apply button to finish.
9. Repeat above for other channels.

9.5 DETECTING VIDEO TAMPERING

Video tampering (i.e. moving camera to a different position) can also be detected and set to trigger an action on your DVR. To setup video tempering detection:

1. Enter Camera Management/Settings menu by clicking Menu > Setting > Camera.
2. Select camera under **Channel #** to configure video loss detection for and click the Set button.
3. Select the **Advanced** tab.
4. Check the **Tamper Detection** checkbox, as shown in Figure 13.

Figure 13. Camera Settings Menu

5. Click the Area Settings button to enter the area setup.
6. Setup tampering area, as shown in Figure 14. Only one tampering area can be set, with the full screen being the maximum area.

Figure 14. Tampering Area Setup

7. Set detection sensitivity. The higher the value set, the higher the sensitivity.
8. Click OK to return to the Camera Settings/Management menu.

9. Click the Handle button to enter the Exception Handle menu, shown in Figure 15.
10. Select the **Handle** tab to configure exceptions handling. Exception trigger options are further explained in the next section (See ***Understanding Exception Trigger Options***).

Figure 15. Exception Handle Menu

11. Select the **Schedule** tab. Set the schedule of when you want video loss detection to be enabled. Schedule can be set for all week or any day of the week with up to 8 time periods per day.
12. Click the Apply button to finish.
13. Repeat above for other channels.

9.6 SETTING EXCEPTION

Setting exceptions allow the DVR to alert you when irregular events occur. These events include:

- **HDD Full:** All installed HDD are full.
- **HDD Errors:** Errors occurred during writing of the HDD or HDD had failed to initialize.
- **Network Disconnected:** Disconnected network cable.
- **IP Conflicted:** Conflict in IP address setting.
- **Illegal Login:** Wrong user ID or password used.
- **Video Exception:** Instable video signal detected.
- **Mismatched Output Standard Mismatch:** I/O video standards do not match.

To set exceptions:

1. Enter the Exception menu by clicking Menu > Exception.
2. Select the exception to configure under **Exception Type**.
3. Select triggering options, as shown in Figure 16. Trigger options are further explained in the next section (See ***Understanding Exception Trigger Options***).

Figure 16. Exception Menu

4. Click OK to save and exit Exception menu.

9.6.1 UNDERSTANDING EXCEPTION TRIGGER OPTIONS

When setting up exception handlers for such features as motion detection and sensor alarms, you may select triggering options to alert you of these exceptions.

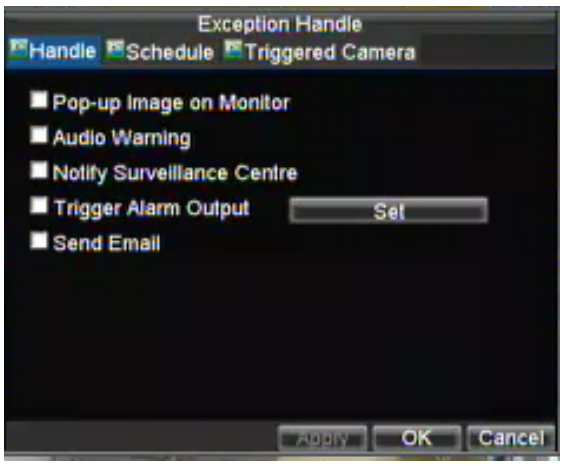

The triggering options that you may select include:

- **Pop-up Image on Monitor:** When an alarm is triggered, the local monitor (VGA or BNC monitor) will display an image under Live Preview mode. This alarm can be configured under the Popup Alarm Image handle method. For alarms that are triggered simultaneously, images will be displayed one at a time every 10 seconds (default dwell time). A different dwell time can be set by going to Menu > Setting > Display > Dwell Time. Once the alarm stops, cycling of the images will also stop and you'll be returned to the Live Preview screen.
- **Audio Warning:** Trigger an audible *beep* when exception is detected.
- **Notify Surveillance Center:** Sends a signal to remote alarm host when exception is detected (See ***Configuring a Remote Alarm Host***).
- **Trigger Alarm Output:** Trigger an alarm output when exception is detected. Alarm output can be configured by following the steps listed in ***Setting Up Sensor Alarms*****.**
- **Send Email:** Sending email when exception is detected. Sending email can be configured by following the steps listed in ***Configuring E-mail Settings*****.**

10 CONFIGURING NETWORK SETTINGS

Network settings must be configured before you're able to use your DVR over the network.

10.1 CONFIGURING BASIC SETTINGS

To configure basic network settings:

1. Enter the Network Settings menu, shown in Figure 1 by clicking Menu > Setting > Network.

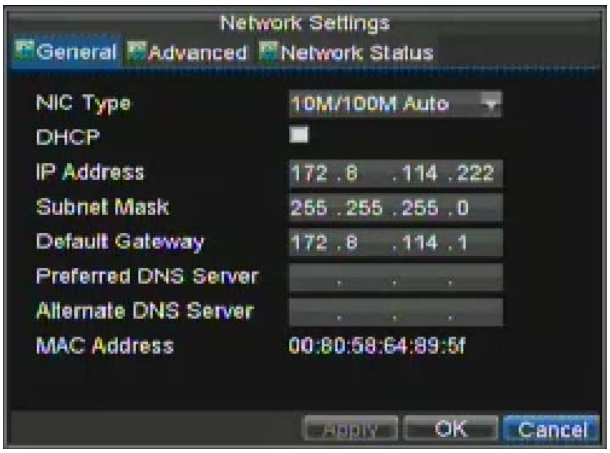

Figure 1. Network Settings Menu

2. Select the **General** tab.
3. If you have a DHCP server running and would like your DVR to automatically obtain an IP address and other network settings from that server, check the **DHCP** checkbox. You may check the DHCP status by going to the **Network Status** tab, as shown in Figure 2.

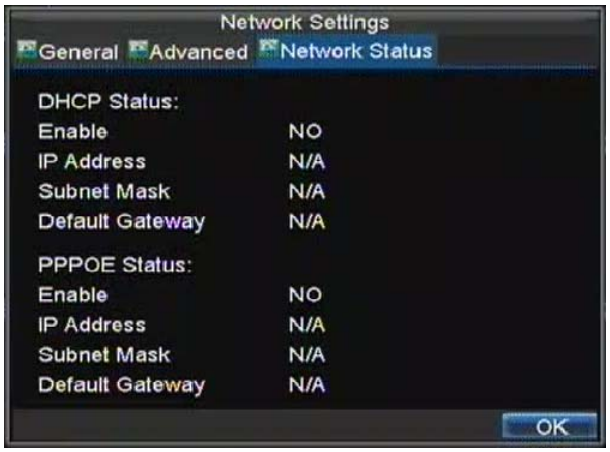

Figure 2. Network Status

4. If you would like to configure your own settings, enter the settings for:
   - **IP Address:** IP address you would like to use for your DVR.
   - **Subnet Mask:** Subnet Mask of network.
   - **Default Gateway:** IP address of your Gateway. Typically the IP address of your router.
   - **Preferred/Alternate DNS Server:** The preferred and alternate Domain Name System (DNS) Server to be used with your DVR.
5. Click OK to save and exit the Network Settings menu.

10.2 CONFIGURING PPPOE SETTINGS

Your DVR also allows for Point-to-Point Protocol over Ethernet (PPPoE) access. To set up PPPoE access:

1. Enter the Network Settings menu by clicking Menu > Setting > Network.
2. Select the **General** tab.
3. Set the IP address and subnet mask to 0, as shown in Figure 3. When the PPPoE connection is successfully established, the IP address will be added automatically.

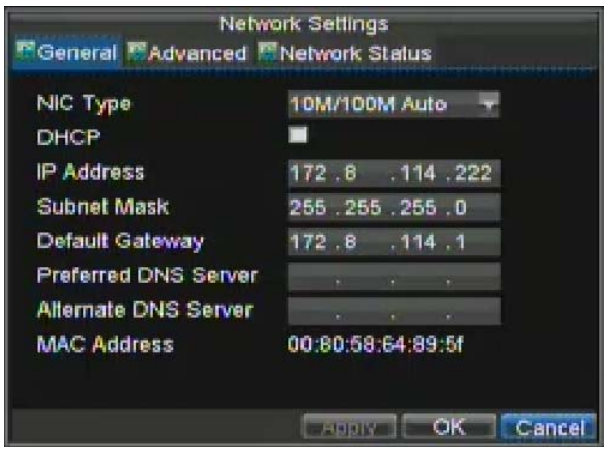

Figure 3. Network Settings Menu

4. Select the **Advanced** tab. This will take you to the advanced network settings menu, shown in Figure 4.

Figure 4. Advanced Network Settings

5. Click the Set button next to **PPPoE** to enter PPPoE settings menu, shown in Figure 5.

Figure 5. PPPoE Settings

6. Check the **PPPoE** checkbox to enable feature.
7. Enter **User Name**, **Password**, and **Confirm Password** for PPPoE access. PPPoE credentials can be obtained from your network administrator. Once the setup is completed, your DVR will automatically *dial-up* into your network after rebooting.
8. Click OK button to save and exit Network Settings menu. You may now restart your DVR for settings to take place. To check on the status of your PPPoE connection, go to Menu > Setting > Network and select the **Network Status** tab.

10.3 CONFIGURING DDNS

If your DVR is setup to use PPPoE as its default network connection, you may setup Dynamic DNS (DDNS) to be used in conjunction.

To setup DDNS:

1. Enter the Network Settings menu by clicking Menu > Setting > Network.
2. Select the **Advanced** tab.
3. Select the Set button next to **DDNS** to enter the DDNS settings menu, shown in Figure 6.

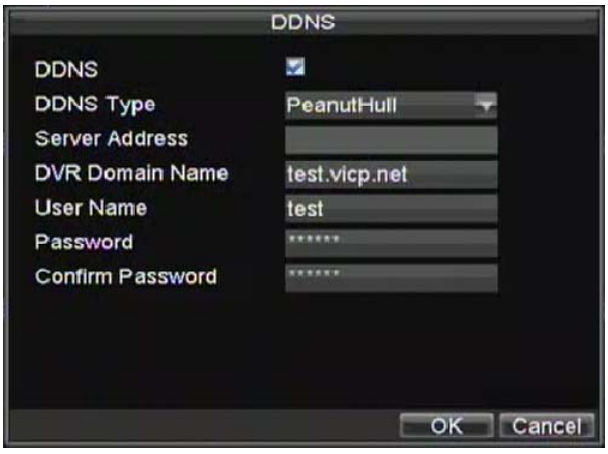

Figure 6. DDNS Settings Menu

4. Check the **DDNS** checkbox to enable feature.

5. Select **DDNS Type**. There are three different DDNS type to choose from, IpServer, PeanutHull and DynDNS.
   - **IpServer:** Enter **Server Address** for IpServer.
   - **PeanutHull:** Enter **User Name** and **Password** obtained from the PeanutHull website (Figure 6).
   - **DynDNS:** Enter **Server Address** for DynDNS (i.e. members.dyndns.org) (Figure 7). Under DVR Domain Name, enter the domain obtained from the DynDNS web site. Lastly, enter the **User Name** and **Password** registered in the DynDNS network.

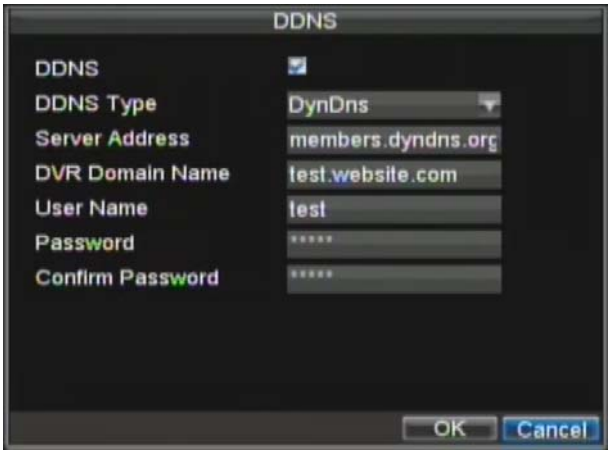

Figure 7. DynDNS Settings

10.4 CONFIGURING AN NTP SERVER

A Network Time Protocol (NTP) Server may also be setup on your DVR to keep the date and time current and accurate.

To setup an NTP server:

1. Enter the Network Settings menu by clicking Menu > Setting > Network.
2. Select the **Advanced** tab.
3. Select the Set button next to **NTP** to enter the NTP settings menu, as shown in Figure 8.

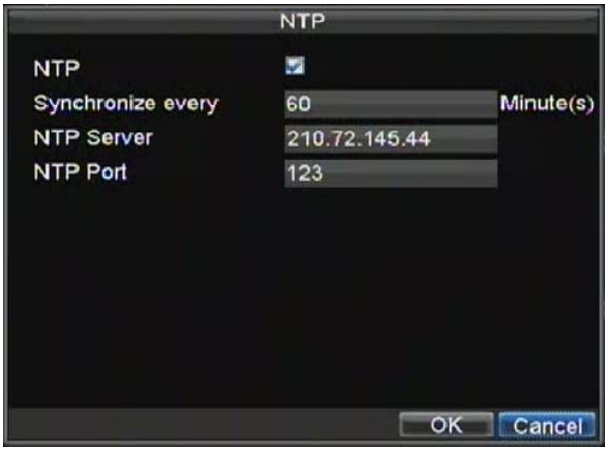

Figure 8. NTP Settings Menu

4. Check the **NTP** checkbox to enable feature.
5. Set NTP settings:
   - **Synchronize Every:** Time in minutes to synchronize with NTP server.
   - **NTP Server:** IP address of NTP server.
6. Click OK to save and exit menu.

Note: Time synchronization interval has a range of 0-10080ms, normally 7200ms. If the DVR is used on a public network, you should use a NTP server that has a time synchronization function, such as the server at the National Time Center (IP Address: 210.72.145.44). If the DVR is setup in a more customized network, NTP software can be used to establish a NTP server used for time synchronization.

10.5 CONFIGURING A REMOTE ALARM HOST

With a remote alarm host set, the DVR will send a signal to the host when an alarm is triggered. The remote alarm host must have the Network Video Surveillance software installed.
To set up a remote alarm host:

1. Enter Network settings menu by clicking Menu > Setting > Network.
2. Select the **Advanced** tab.
3. Click the Set butt next to **Host/Others** to enter the Host/Others menu, as shown in Figure 9.

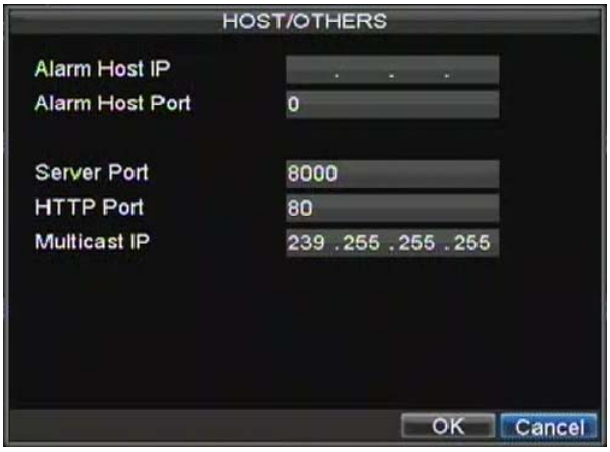

Figure 9. Host/Others Menu

4. Enter **Alarm Host IP** and **Alarm Host Port**. Alarm Host IP is the IP of the remote PC which has the Network Video Surveillance software installed. The Alarm Host Port must be the same as software's alarm monitor port (default port is 7200).

10.6 CONFIGURING MULTICAST

Setting up multicasting solves limitation issues when streaming videos through a network access device. A multicast address spans the Class-D IP range of 224.0.0.0 to 239.255.255.255. It is suggested that the IP address range of 239.252.0.0 to 239.255.255.255 be used.
To set up multicasting:

1. Enter the Network Settings menu by clicking Menu > Setting > Network.
2. Select the **Advanced** tab.
3. Click the Set button next to **Host/Others** to enter the Host/Others menu.
4. Set **Multicast IP**, as shown in Figure 10. When adding a device to the Network Video Surveillance software, the multicast address must be the same as the DVR's multicast IP.

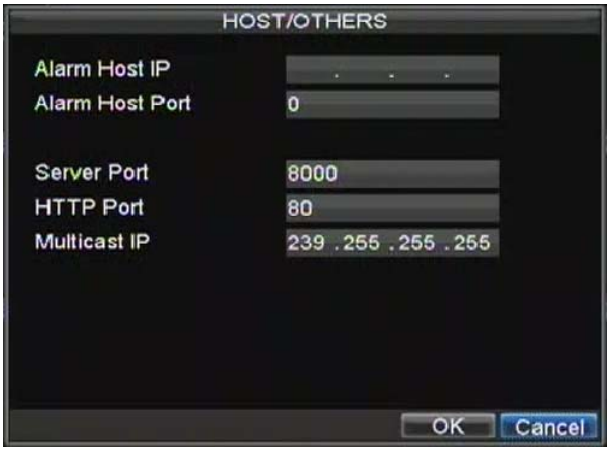

Figure 10. Host/Others Menu

5. Click OK to save and exit menu.

10.7 CONFIGURING SERVER AND HTTP PORTS

If you would like to change the server and HTTP ports from the default settings, you can do so in the Network Settings menu. The default server port is 8000 while the default HTTP port is 80.
To change the default ports:

1. Enter the Network Settings menu by clicking Menu > Setting > Network.
2. Select the **Advanced** tab.
3. Click the Set button next to **Host/Others** to enter the Host/Others menu.
4. Enter new **Server Port** and **HTTP Port**, as shown in Figure 11.

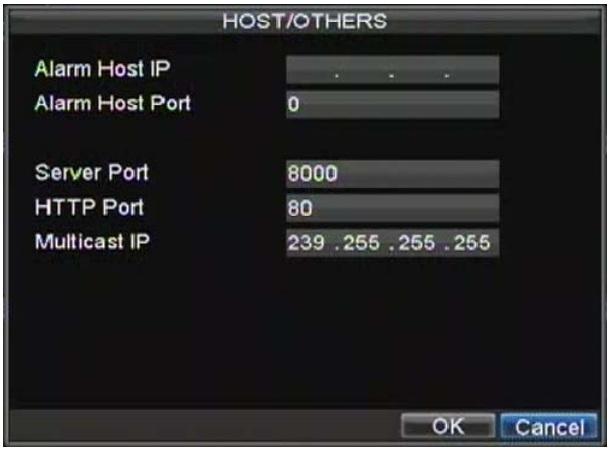

Figure 11. Host/Others Menu

Note: The Server Port has a port range of 2000-65535 and is used for remote client software access. The HTTP port is used for remote internet browser access.

10.8 CONFIGURING E-MAIL SETTINGS

To configure E-mail settings:

1. Enter the Network Settings menu by clicking Menu > Setting > Network.
2. Select the **Advanced** tab.
3. Click the Set button next to **E-mail** to enter the E-mail menu. The E-mail menu is shown in Figure 12.

Figure 12. E-mail Menu

4. Enter e-mail settings. Please refer to Figure 12 for details.
5. In advanced tab of email menu, enable **Attached JPEG File** if you want to send email with alarm images, the interval is the time of two adjacent alarm images.
6. Set SMTP Port and SSL if needed.
7. Click the OK button to save and exit the E-mail menu.

Note: It is recommended that the e-mail settings be tested after they are entered. This can be accomplished by clicking the Test button in the E-mail menu.

11 PTZ CONTROLS

11.1 NAVIGATING PTZ MENUS

PTZ menus can be navigated through with either the mouse or the front panel/remote. For quick access to certain PTZ settings, right clicking with the mouse in a display while in PTZ control mode will bring up the PTZ settings menu. This menu is shown in Figure 1.

Figure 1. Mouse PTZ Settings Menu

The items that can be found on this menu include:

- **Camera:** Select a PTZ camera.
- **Call Preset:** Call a PTZ preset.
- **Call Patrol:** Call a PTZ sequence.
- **Call Pattern:** Call a PTZ pattern.
- **Patrol Setting:** Enter PTZ sequence configuration menu.
- **Pattern Setting:** Enter PTZ pattern configuration menu.
- **PTZ Setting:** Enter PTZ setting menu.

11.2 CONFIGURING PTZ SETTINGS

Settings for a PTZ camera must be configured before it can be used. Before proceeding, verify that the PTZ and RS-485 of the DVR are connected properly.
To configure PTZ settings:

1. Enter the PTZ Settings menu by clicking Menu > Setting > PTZ. The PTZ Settings menu is shown in Figure 2.

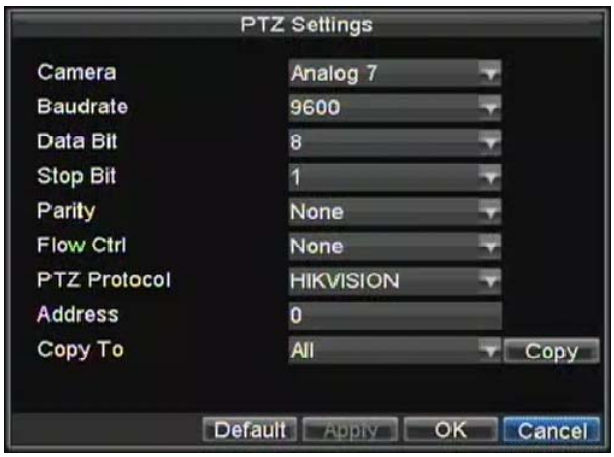

Figure 2. PTZ Settings Menu

2. Select channel where PTZ camera is installed next to **Camera** label.
3. Enter PTZ settings so it matches that of the PTZ camera.
4. Click OK button to save and exit menu.

11.3 SETTING PTZ PRESETS, PATROLS & PATTERNS

Your DVR allows you to customize presets, patrols and patterns for a connected PTZ camera.

11.3.1 UNDERSTANDING PTZ CONTROLS

Before setting presets, patrols and patterns, it's important to understand some of the features of the PTZ control panel, shown in Figure 3.

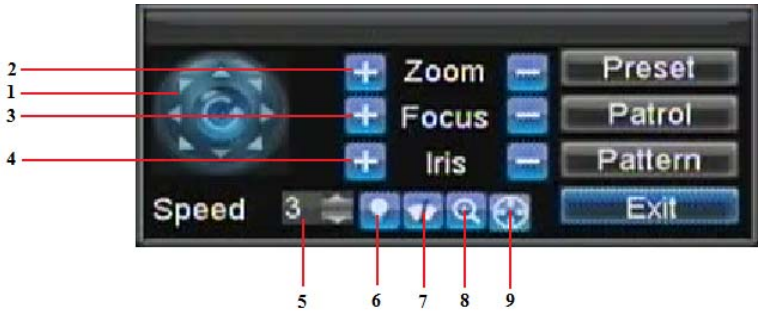

Figure 3. PTZ Control Interface

The controls on the PTZ panel include:

1. **Directional Pad/Auto-scan Buttons:** Controls the movements and directions of the PTZ. Center button is also used to start auto-scan of PTZ.
2. **Zoom:** Used to zoom in and out with the PTZ.
3. **Focus:** Used to adjust the focus of the PTZ.
4. **Iris:** Used to open up or close the iris of the PTZ.
5. **Speed:** Adjusts the movement speed of the PTZ.
6. **Light:** Turns PTZ light (if applicable) on and off.
7. **Wiper:** Turns PTZ wiper (if applicable) on and off.
8. **Zoom In:** Instantly zooms PTZ in.
9. **Center:** Centers PTZ.

11.3.2 CUSTOMIZING PRESETS

Presets can be set to move your PTZ camera to a desired *preset* location at the click of a button.
To setup and use custom PTZ presets:

1. Enter the PTZ Control interface, shown in Figure 3 by clicking PTZ in the mouse menu or the PTZ button on the front panel.
2. Select the Preset button to enter the Preset Management menu.
3. In the Preset Management menu, shown in Figure 4, you may:
   - **Configure Preset:** Use the PTZ control panel to adjust the position of the preset. Select a Preset number and click the Set button to save preset location.
   - **Clear Preset:** Select a Preset number and click the Clear button to delete the preset. You may also select the Clear All button to delete all presets.
   - **Call Preset:** Select a Preset and click the Call button.

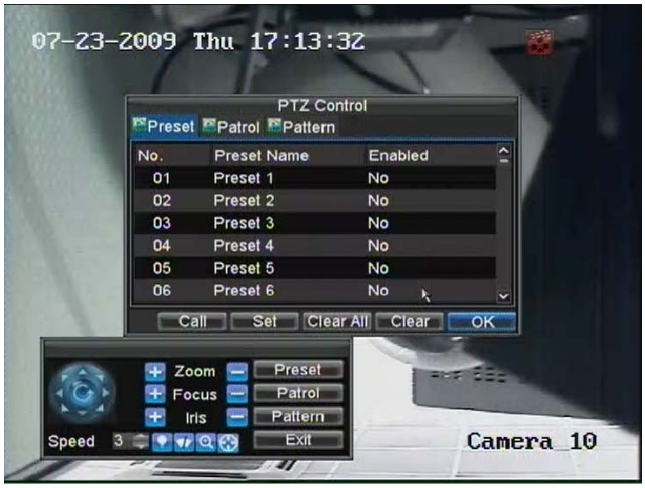

Figure 4. Preset Management Menu

Note: Only valid presets can be called and deleted.

11.3.3 CUSTOMIZING PATROLS

Patrols can be setup to move the PTZ to different key points and have it stay there for a set duration before moving on to the next point. The key points are defined by presets which can be set following the steps above in ***Customizing Presets***.

To set up and use PTZ patrols:

1. Enter the PTZ Control interface, shown in Figure 3 by clicking PTZ in the mouse menu or the PTZ button on the front panel.
2. Select the Patrol button to enter the Pareol Management menu, shown in Figure 5.

Figure 5. Patrol Management Menu

3. In the Patrol Management menu, you may:
   - **Configure Patrol:**
     1. Select a **Patrol Number** to set.
     2. Select valid presets (See ***Customizing Presets***) and click the Set button to enter the Patrol configuration menu. A sequence should have at least 2 valid presets.
     3. Set the **Key Point No.**, **Duration**, and **Speed** (Figure 6). The **Key Point No.** determines the order at which the PTZ will follow while cycling through the patrol. The **Duration** refers to the time span to stay at the corresponding key point. The **Speed** defines the rate at which the PTZ will move from one key point to the next.

Figure 6. Patrol Configuration Menu

4. Click OK to return to Patrol Management menu and repeat steps 2-3 to configure other key points.
5. After all key points have been configured, click OK to save and exit menu.

   - **Clear Patrol:**
     1. Select a valid **Patrol Number**.
     2. Click the Clear button to delete patrol.
   - **Call Patrol:**
     1. Select a valid **Patrol Number**.
     2. Click the Start button to call the patrol, select the stop button to stop the patrol, as shown in Figure 7.

Figure 7. Patrol Management Menu

11.3.4 CUSTOMIZING PATTERNS

Patterns can be setup by recording the movement of the PTZ.

To setup and use PTZ patterns:

1. Enter the PTZ Control interface, shown in Figure 3 by clicking PTZ in the mouse menu or the PTZ button on the front panel.
2. Select the Pattern button to enter the Pattern Management menu, shown in Figure 8.

Figure 8. Pattern Management Menu

3. Select a **Pattern Number**.
4. To record a new pattern, select the Run Record button to start recording of the movements of the PTZ. Use the PTZ control panel to move the PTZ. The PTZ movements will be recorded until the Stop Record button is clicked.
5. To run a pattern, click the Run Pattern button on a valid pattern. The PTZ will move according to the path that was defined until Stop Pattern is clicked.
6. Click OK to save and exit from menu.

12 CAMERA MANAGEMENT

12.1 CONFIGURING OSD SETTINGS

On Screen Display (OSD) settings can be configured in the Camera Management menu. The OSD is shown in each display during Live Preview mode and includes the time and date as well as the camera name.

To configure OSD settings:

1. Enter the Camera Management/Settings menu, shown in Figure 1 by clicking Menu > Setting > Camera.
2. Select channel to setup OSD settings under **Channel #**. Click the Set button.
3. Configure desired OSD settings, as shown in Figure 1.

Figure 1. OSD Settings Menu

12.2 SETTING UP PRIVACY MASK

You may setup privacy mask to mask off sensitive or private areas in the field of view of a camera.

To setup privacy mask:

1. Enter the Camera Management/Settings menu, shown in Figure 1 by clicking Menu > Setting > Camera.
2. Select channel to setup privacy mask under **Channel #**. Click the Set button.
3. Select the **Advanced** tab to enter the Advanced Camera Settings menu, shown in Figure 2.

Figure 2. Advanced Camera Settings Menu

4. Check the **Mask** checkbox to enable feature.
5. Click the Area Settings button to enter Area Settings menu.
6. Setup mask area, as shown in Figure 3. Up to 4 areas can be set.

Figure 3. Setting Mask Area

7. Select OK to save and exit mask setup.

12.3 ADJUSTING DISPLAY SETTINGS

Display settings such as the brightness, contrast, saturation and hue can also be adjusted in the Camera Management menu.

To adjust display settings:

1. Enter the Camera Settings menu by clicking Menu > Setting > Camera.
2. Select channel to adjust display settings under **Channel** #. Click the Set button.
3. Select the **Advanced** tab to enter the Advanced Camera Settings menu, shown in Figure 8.
4. Click the Set button next to the Color Settings label.
5. Adjust the display settings, as shown in Figure 4. Brightness, contrast, saturation and hue can be adjusted. The adjustments of display settings not only affect previewed images, but also recorded images.

Figure 4. Display Settings

13 MANAGING HDDS

13.1 INITIALIZING HDDS

A newly installed hard disk drive (HDD) must be first initialize before it can be used with your DVR. Initializing the HDD will erase all data on it.
To initialize a HDD:

1. Enter the HDD Management menu, shown in Figure 1 by clicking Menu > HDD.

Figure 1. HDD Management Menu

2. Select HDD to initialize.
3. Click the Init button.
4. Select OK button to begin initialization. After the HDD has been initialized, the status of the HDD will change from *Abnormal* to *Normal*.

13.2 SETTING HDD GROUPS

Your DVR can separate multiple HDDs into groups. Videos from specified channels can be set to be recorded onto a particular HDD group.
To setup a HDD group:

1. Enter the HDD Management menu by clicking Menu > HDD.
2. Select HDDs to be added to group.
3. Select Group button to enter Group Settings menu.
4. Set the **HDD Group Number**, as shown in Figure 2.

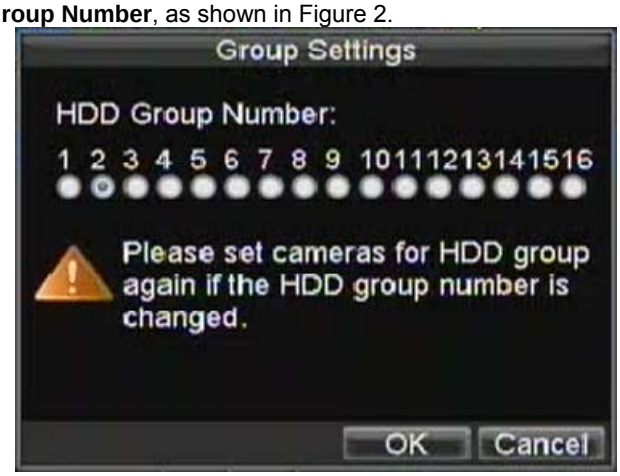
Group Settings
HDD Group Number:
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
Please set cameras for HDD group again if the HDD group number is changed.
OK
Cancel

Figure 2. HDD Group Settings Menu

5. Select OK to save and exit menu.

Note: By default, all HDDs belong to group 1.

13.3 SETTING HDD STATUS

You may change the behavior of your HDD by changing its status. The status of a HDD can be set to redundancy, read-only or read/write (R/W).

13.3.1 SETTING HDD TO READ-ONLY

A HDD can be set to read-only to avoid important recorded files from being overwritten when the HDD becomes full.

To set a HDD to read-only:

1. Enter the HDD Management menu by clicking Menu > HDD.
2. Select HDD to protect.
3. Select the Property button to enter the Property Settings menu, as shown in Figure 3.

Figure 3. HDD Property Settings Menu

4. Set **HDD Status** to **Read-Only**.
5. Select OK to save and exit menu.

Note: Once set to read-only, the HDD cannot be written to until it is set back to read/write (R/W). If the HDD that is currently being written to is set to read-only, the data will be recorded to the next HDD. If there is only one HDD present, setting it to read-only will cause the DVR to not record.

13.3.2 SETTING HDD TO REDUNDANCY

In order to use HDD redundancy on your DVR, you will need to have at least two disk installed. Setting up HDD redundancy will allow your DVR to redundantly record a copy of the videos onto multiple drives as a safeguard against losing all your files in case of disk failures.

To setup HDD redundancy:

1. Enter the HDD Management menu by clicking Menu > HDD.
2. Select HDD to setup redundancy on.
3. Select the Property button to enter the Property Settings menu, as shown in Figure 3.
4. Set **HDD Status** to **Redundancy**.
5. Select OK to save and exit menu.

Note: The HDD that is set to redundancy is used to store an extra copy of the recording. If a HDD is set to redundancy, at least one HDD should be set to the R/W status.

13.4 CHECKING HDD STATUS

You may check the status of any of the installed HDDs on your DVR at anytime.

To check the status of a HDD:

1. Enter the HDD Management menu by clicking Menu > HDD.
2. The status of your HDD is listed under the **Status** column. If the status is listed as *Normal* or *Hibernate*, the HDD is in working order. If it is listed as *Abnormal* and has already been initialized, the HDD needs to be replaced. If the HDD is *Uninitialized*, you will need to initialize it before it can be use in your DVR. Please refer to ***Initializing HDDs*** for further instructions.

You may also view the SMART information of installed HDDs. SMART, short for Self-Monitoring, Analysis and Reporting Technology is a monitoring system for hard disk drives to detect and report on various indicators of reliability in the hopes of anticipating failures.

To view SMART information of a HDD:

1. Enter the Log Search menu, shown in Figure 4 by clicking Menu > Maintenance > Log.

Figure 4. Log Search Menu

2. Set **Major Type** to *Information.*
3. Set **Minor Type** to *HDD SMART.*
4. Enter **Start Time** and **End Time**.
5. Click the Search button to begin log search. A result list, similar to that of Figure 5 will be returned.

Figure 5. Log Search Results

6. Select log item to view and click the Details button.
7. A detail listing of SMART information, as shown in Figure 6 will be displayed.

Figure 6. SMART Information

13.5 CONFIGURING HDD ALARMS

HDD alarms can be set to trigger when an HDD is uninitialized or in an abnormal state.

To set HDD alarms:

1. Enter Exception menu, shown in Figure 7 by clicking Menu > Exception.

Figure 7. Exception Menu

2. Select HDD Error under **Exception Type**.
3. Select trigger action. Trigger actions are further explained in ***Understanding Exception Trigger Options***.

14 DVR MANAGEMENT

14.1 CONFIGURING GENERAL SETTINGS

General settings such as the system language can be configured in the General Settings menu of your DVR.
To configure general settings:

1. Enter the General Settings menu, shown in Figure 1 by clicking Menu > Setting > General.

Figure 1. General Settings Menu

2. Select the **General** tab.
3. Configure general settings. These settings include:
   - **Language:** Default language used in DVR menus.
   - **CVBS Output Standard:** Video output standard: NTSC and PAL.
   - **VGA Resolution:** VGA output resolution.
   - **Time Zone:** Time zone to use for DVR.
   - **Menu Date Format:** Format to use for date.
   - **System Time:** System time and date.
   - **Mouse Pointer Speed:** Speed of mouse pointer.
   - **Enable Password:** Enable/disable system password.

Note: If the video standard is different between the input and the output, you may notice flickering in Live Preview mode.

14.1.1 CONFIGURING ADVANCED SETTINGS

To configure more advanced settings:

1. Enter the General Settings menu, shown in Figure 1 by clicking Menu > Setting > General.
2. Click the **More Settings** tab; this will take you to the More Settings menu, shown in Figure 2.

Figure 2. More Settings Menu

3. Configure settings, including:
   - **Device Name:** Name to use for DVR**.**
   - **Device No.:** Device number to use for DVR.
   - **CVBS Output Brightness:** Video output brightness.
   - **Transparency:** Menu transparency.
   - **Operation Timeout:** Set timeout time for menu inactivity. For example, if timeout time was set to 5 minutes, after 5 minutes of inactivity in the General Settings menu, you'll be returned to the Live Preview.
   - **Enable Output Hint:** To display output status in preview.
   - **CVBS Scaling:** Enable/disable video output scaling for main/aux video output.

14.2 CONFIGURING RS-232 PORT SETTINGS

To configure RS-232 devices to be used with the DVR:

1. Enter the RS-232 Settings menu, shown in by clicking Menu > Setting > RS232.

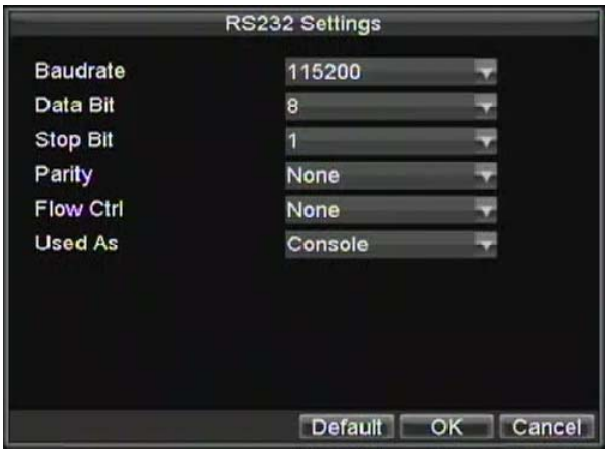

Figure 3. RS-232 Settings Menu

2. Configure RS-232 Settings.
3. The RS-232 port can be used in two ways:
   - **Parameter Control:** Connect a PC to the DVR using the PC serial port. Device parameters can then be set using software such as HyperTerminal. The serial port parameters must be the same as the DVR's when connecting with the PC serial port.
   - **Transparent Channel:** Connect a serial device directly to the DVR. The serial device will be controlled remotely by the PC through the network and the protocol of the serial device.

Note: Please note that the remote control features through the RS-232 port are limited.

14.3 MANAGING USER ACCOUNTS

By default, your DVR comes with one user account, the *Administrator* account. The *Administrator* user name is *admin* and the password is *12345*. The default password for *Administrator* should be changed right away for security reasons. The *Administrator* has the authority to add, delete or configure parameters for many of the system functions.

14.3.1 ADDING A NEW USER

You may add up to 31 new users to your DVR. To add new users:

Enter the User Settings menu, shown in Figure 4 by clicking Menu > Setting > User.

Figure 4. User Settings Menu

1. Select the Add button to enter the Add User menu, shown in Figure 5.

Figure 5. Add User Menu

2. Enter information for new user, including **User Name**, **Password**, **Level** and **User's MAC**.
3. The **Level** is the user level and is separated into two tiers.
   - **Operator:** The Operator user level has the authority to configure two-way audio in network settings and all parameters in channel settings.
   - **Guest:** The Guest user can not configure network settings, but can configure the local playback as well as the remote playing in channel settings.
4. If **User's MAC** is configured and enabled, the user may only access the DVR from that particular MAC address.

5. Select the Permission button to enter the Privilege Settings menu, shown in Figure 6.

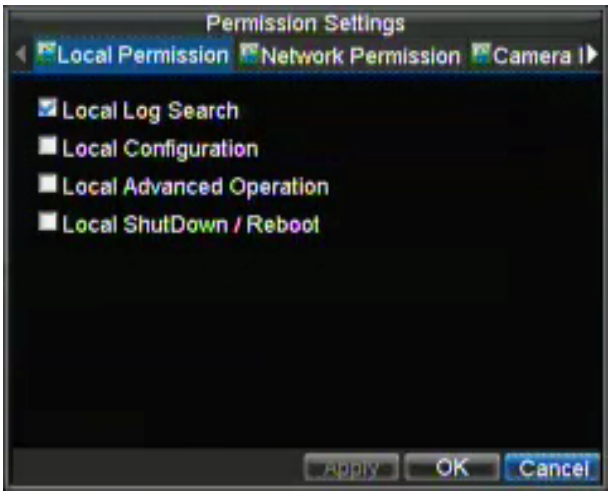

Figure 6. Privilege Settings Menu

6. Configure privileges for local settings under **Local Permission** tab. The local settings include:
   - **Local Log Search:** Search and view logs of DVR.
   - **Local Configuration:** Configure and restore parameters to factory defaults. Introduce settings to or export settings from DVR.
   - **Local Advanced Management:** HDD management (including the initialization and changing the properties of a disk). Ability to update system firmware as well as to stop the relay output
   - **Local Shutdown/Reboot:** Shutdown or reboot the DVR.
7. Click on the **Network Permission** tab to configure network privileges, as shown in Figure 7. The network settings include:

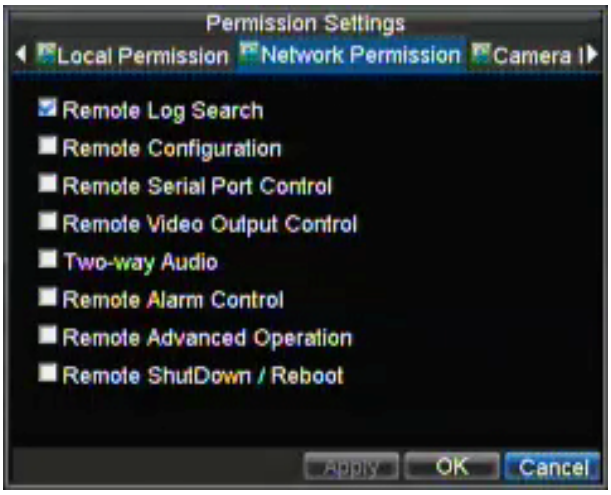

Figure 7. Network Privileges Menu

- **Remote Log Search:** Remotely view logs that are saved on the DVR.
- **Remote Configuration:** Remotely configure parameters, restore parameters to factory defaults and import settings to as well as export settings from DVR.
- **Remote Serial Port Control:** Configure settings for RS232 and RS485 ports.
- **Remote Video Output Control:** Configure settings for video output.
- **Two-Way Audio:** Ability to use two-way radio between the remote client and the DVR.
- **Remote Alarm Control:** Remote alert or control the relay output of the DVR. Alarm and exception settings must be configured properly to upload to host.
- **Remote Advanced Management:** Remotely manage hard disk drives (initializing and setting properties for HDDs). Ability to remote update system firmware and stop of the relay output
- **Remote Shutdown/Reboot:** Remotely shutdown or reboot the DVR.

8. Click on the **Channel Permission** tab to configure channel privileges, as shown in Figure 8. The channel settings include:

Figure 8. Channel Privileges Menu

- **Remote Live View:** Select and view live video over the network.
- **Local Manual Record:** Locally start and stop manual recording on any of the channels.
- **Remote Record Starting:** Remotely start and stop manual recording on any of the channels.
- **Local Playback:** Locally play recorded files that are on the DVR.
- **Remote Playback:** Remotely play and download recorded files that are on the DVR.
- **Local PTZ Control:** Locally control PTZ cameras.
- **Remote PTZ Control:** Remotely control PTZ cameras.
- **Local Video Export:** Locally backup recorded files from any of the channels.

9. Click the OK button to save and exit menu.

Note: If you forget the password to your DVR, contact your supplier with the serial number of your DVR to obtain a secure code to reset your DVR.

14.3.2 DELETING A USER

To delete a user from the DVR:

1. Enter the User Settings menu by clicking Menu > Settings > User.
2. Select user to delete.
3. Click the Delete button to delete user.
4. Click the OK button to exit menu.

14.3.3 MODIFYING A USER

To modify a user:

1. Enter the User Settings menu by clicking Menu > Settings > User.
2. Select user to modify.
3. Click the Modify button to enter the Modify menu, shown in Figure 9.

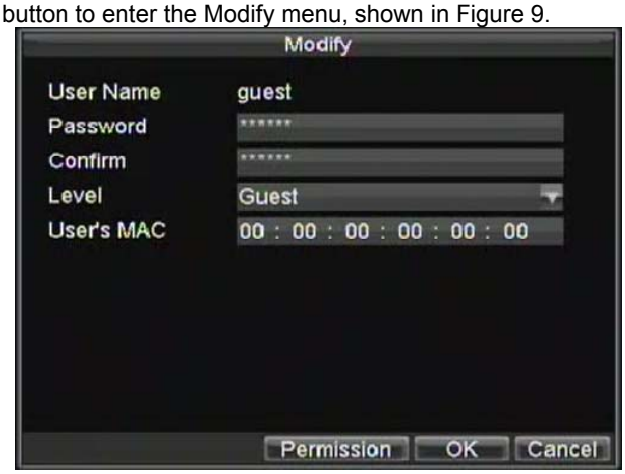

Figure 9. Modify User Menu

4. Edit user information.
5. To modify user permissions, click on the privileges button. Permissions settings are defined in the section above, ***Adding a New User***.
6. Click the OK button to exit menu.

14.4 MANAGING SYSTEM

Configuration information from your DVR can be exported to a USB device and imported into another DVR. This will allow you to efficiently setup the same configuration on numerous DVRs.

To import or export DVR configuration:

1. Enter the Import/Export Configuration menu, shown in Figure 10 by clicking Menu > Maintenance > Configuration.

Figure 10. Import/Export Configuration Menu

2. Click Export to export a configuration file to USB device. USB device must be connected at this point to the DVR.
3. To import a configuration file, select the file from the USB device and click the Import button. After the import process is completed, you must reboot the DVR.
4. Click Cancel to exit out of menu.

14.5 UPDATING SYSTEM FIRMWARE

The firmware on your DVR can be updated using two methods. These methods include updating via an USB device or over the network via a FTP server.
To update via an USB device:

1. Connect USB device to DVR. The firmware file must be located in the root directory of your USB device.
2. Enter the Firmware Update menu, shown in Figure 11 by clicking Menu > Maintenance > Upgrade.

Figure 11. Firmware Update Menu

3. Select the **Local Upgrade** tab.
4. Select the firmware on the USB device.
5. Select Upgrade to begin the update process.
6. After the system firmware has been updated, reboot the DVR.

To update via a FTP server:

1. Configure PC (running FTP server) and DVR to be in the same Local Area Network. Run the 3rd-party TFTP software on the PC and copy the firmware into the root directory of TFTP.
2. Enter the Firmware Update menu by clicking Menu > Maintenance > Upgrade.
3. Select the **FTP** tab, shown in Figure 12.

Figure 12. FTP Firmware Update

4. Input the FTP server address.
5. Select Upgrade to begin update process.
6. After the system firmware has been update, reboot the DVR.

Note: If the DVR fails to update, please contact your system supplier for further assistance.

14.6 RESTORING DEFAULT SETTINGS

To restore default factory settings to your DVR:

1. Enter the Default Settings menu, shown in Figure 13 by clicking Menu > Maintenance > Default.

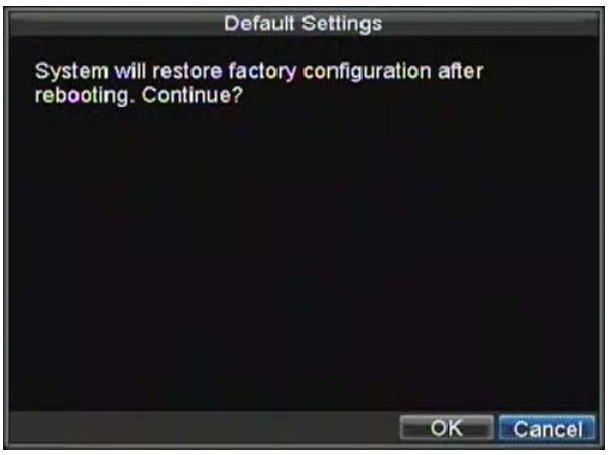

Figure 13. Default Settings Menu

Select OK to restore factory defaults.

Note: Network information such as IP address, subnet mask and gateway will not be restored.

14.7 VIEWING SYSTEM INFORMATION

To view system information:

1. Enter into the Information menu, shown in Figure 14 by clicking Menu > Maintenance > Information.
2. Select OK to exit to the previous screen.

14.8 VIEWING SYSTEM LOGS

Many events of your DVR are logged into the system logs.

To access the system logs and search for these events:

1. Enter the Log Search menu, shown in Figure 15 by clicking Menu > Maintenance > Log Search.

Figure 15. Log Search Menu

2. Set search parameters.
3. Click the Search button to begin search. If logs matching the search criteria are found, it will be displayed in a list similar to that of Figure 16.

Log Search
Major Type Start Time Minor Type Paramet
Opera 07-23-2009 09:12: Power On N/A
Inform 07-23-2009 09:12: HDD Informatio N/A
Inform 07-23-2009 09:12: HDD S.M.A.R.T N/A
Except 07-23-2009 09:12: Video Signal Lo N/A
Except 07-23-2009 09:12: Video Signal Lo N/A
Except 07-23-2009 09:12: Video Signal Lo N/A
Except 07-23-2009 09:12: Video Signal Lo N/A
Except 07-23-2009 09:12: Video Signal Lo N/A
Except 07-23-2009 09:12: Video Signal Lo N/A
Except 07-23-2009 09:12: Video Signal Lo N/A
Details
Play
Export
Cancel

Figure 16. Log Search Results

4. To view more detail information about a particular log entry, select the entry and click the Details button.
5. If applicable, you may also view the associated video to the selected log entry by clicking the Play button.

6. Log files can also be exported onto a USB device. To export a log file, connect a USB device to the DVR, select the log file to export and click the Export button. This will take you to the Log Search Export menu, shown below in Figure 17. Click the Export button to export log onto USB device. The exported file will be named according to the time it was exported (i.e. 2000062991627.txt).

Figure 17. Log Search Export Menu

7. Click Cancel to exit out of menu.

15 URMET WEB SERVER

15.1 INTRODUCTION

Web server, which requires Activex control compatible in the browser.
When access the device which contains V2.3 web server from IE browser for the first time, an OCX package will be downloaded and registered to your PC/laptop.
The compatible resolution of display can be 1024x768, 1152x864, 1280x768, etc.

Note: To operate a web server on your PC/laptop, IE6.0 or upper version is recommended.

15.2 USER LOGIN AND LOGOUT

If the web browser is in high level security, please navigate to Internet Options -> Custom Levels, check the status of Security Settings and make sure it allows the downloading of plug-ins.

Enter URL like http://172.9.9.128 to access the device, if the http has been changed, an additional http port number should be tagged (such as http://172.9.9.128:88), the following page will appear once enter the URL:

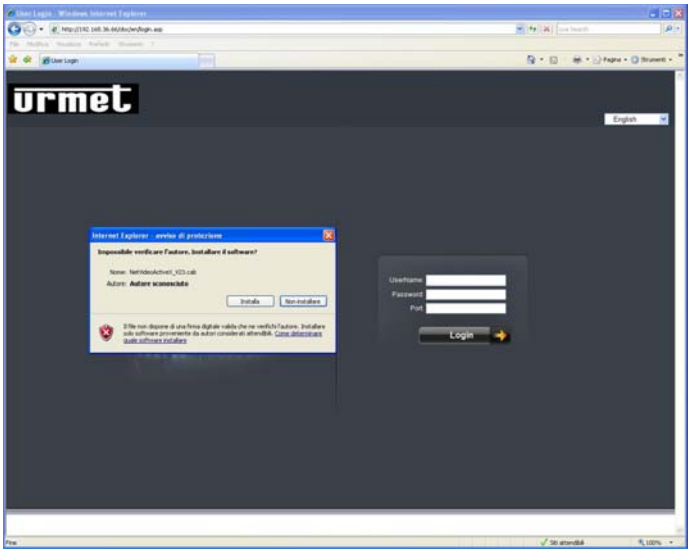

Select Install to download the web server, it will be installed and registered automatically to your PC/laptop., wait for a few seconds until it's done. Enter the user name, password and port in the fields and click Login button to log to the device, main interface shown as following:

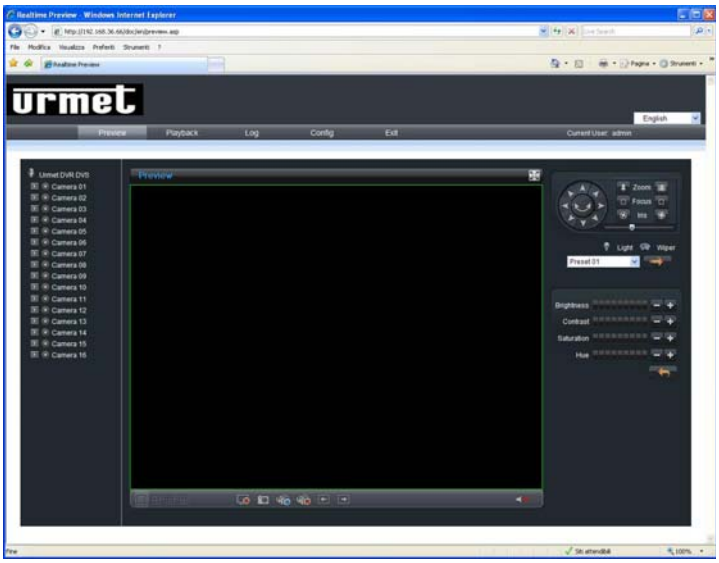

The user can click Exit and then confirm to log out the main page.

15.3 LIVE PREVIEW

The main page appears when log on to the device successfully:

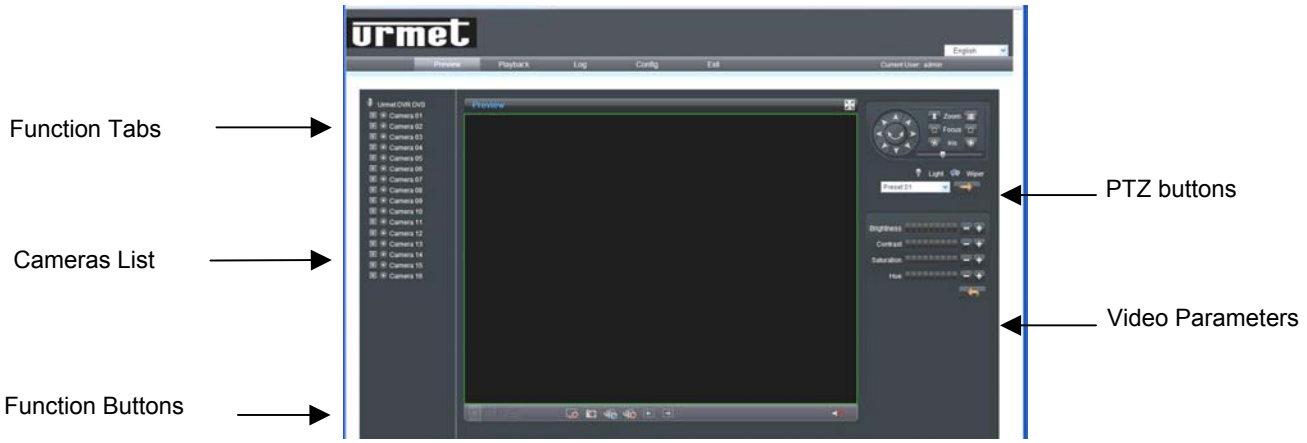

Function Buttons:

Buttons	Description	Buttons	Description
	Single camera		4 cameras divisions
	9 cameras divisions		16 cameras divisions
	25 cameras divisions		Stop All
	Snapshot capture		Start recording
	Stop recording		Last page
	Next page		Open/Close audio

15.3.1 3.1.1 VIDEO SPLIT SELECTION

You can select the different video split modes either in preview or before preview, the supported video split modes can be single camera, 4-split, 9-split, 16-split and 25-split, the actual supported modes is relative to the models, for instance, 4 channels Device only support single camera and 4-split modes. Click you will be navigated to full screen mode.

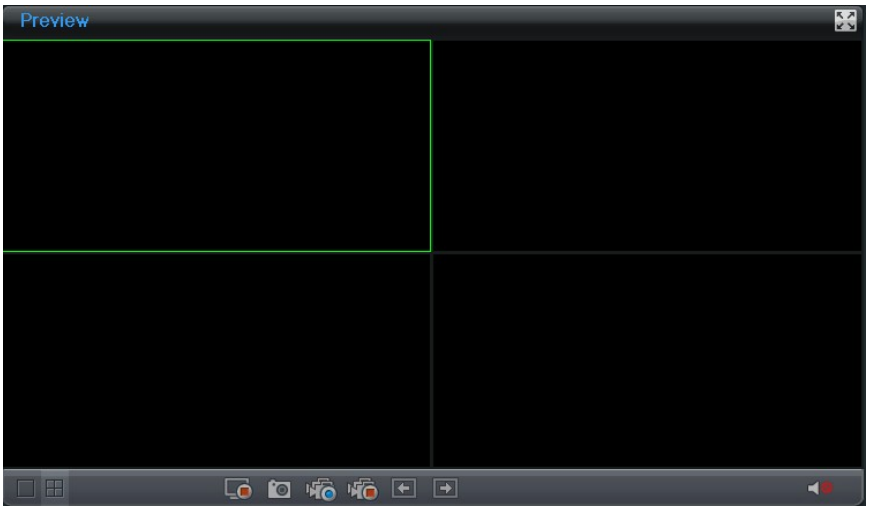

15.3.2 3.1.2 START/STOP PREVIEW

Select icon to preview the desired camera, icon will be indicated if successfully get the video, otherwise, failure information will pop up. Click the icon again you can stop previewing the corresponding camera. Besides, you can click to navigate to the next page or to the last page.

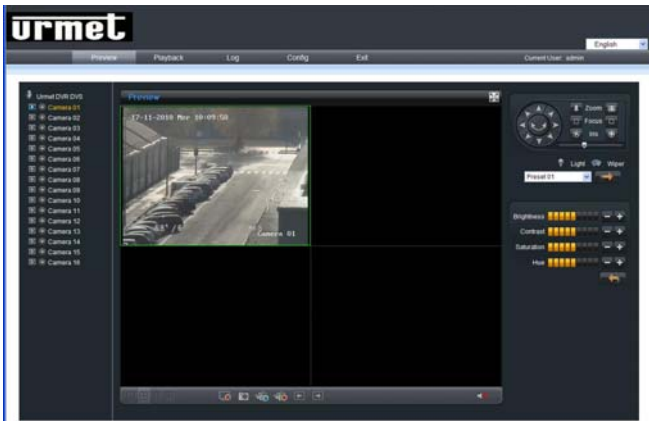

15.3.3 3.1.3 AUDIO CONTROL

If audio pickup connected to the device, you can open the sound in the web server.

Select the desired camera in live preview and click to activate the audio, the icon will be lighted, at the same time you can adjust volume on a slider which is popped up by clicking arrow icon on the right side.

15.4 RECORDING AND SNAPSHOT CAPTURE

In the live preview , the user can start manual recording or capture snapshots if needed.
Note: if you stop playing video, the recording will stop as well.

To choose the saving path for recording and snapshot, you need to navigate to Config page, shown as following figure:

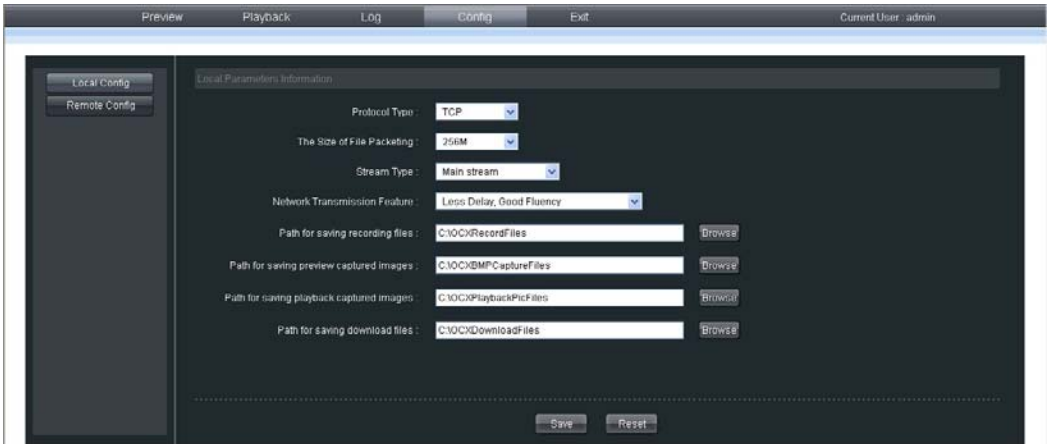

15.4.1 MANUAL RECORDING

Select the desired camera and then click to start recording, the icon will be indicated and changed to , otherwise, failure information will popped up. Click the icon again to stop recording. If multiple cameras are previewed, you can click to start all recording and click to stop all recording

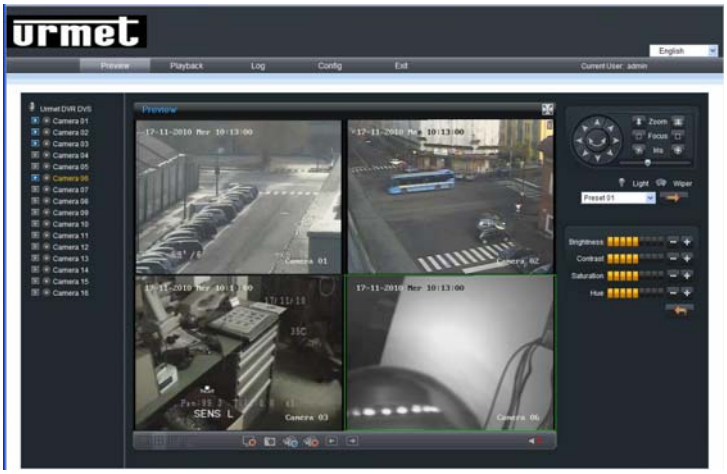

15.4.2 SNAPSHOT CAPTURE

Select the desired camera in live preview, you can click to capture a picture whenever you want, the saving folder will be opened automatically.

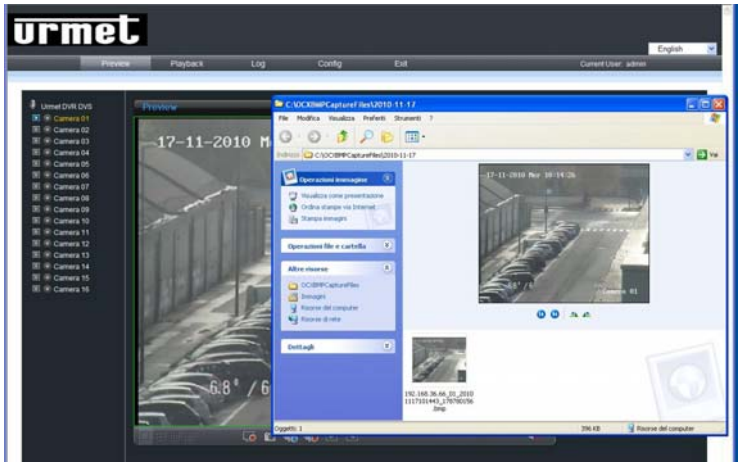

15.5 VOICE TALK

The Bi-directional voice talk can be set up between back-end and front-end.

Click icon which is next to the camera list to start voice talk, the icon will be indicated and changed to , click this icon again to stop voice talk.

Note: the audio preview will closed automatically once voice talk has been set up.

15.6 VIDEO PARAMETERS SETTING

When in preview, you can adjust the video parameters such as Brightness, Contrast, etc. Shown as figure below:

Click icon to increase or to decrease the value, click to restore the parameters.

15.7 PTZ CONTROL

The PTZ control is available on the web server, make sure that the parameters are set properly before control PTZ camera, the control is shown as below figure:

The eight arrow buttons are for the position control, click to start 'Auto Pan' function which should be supported by the protocol. Adjust on the slider to adjust the speed of pan and tilt.

15.8 PLAYBACK

Buttons	Description	Buttons	Description
	Play		Stop
	Slow down		Speed up
	Single frame		Snapshot capture
	Video clip		Open sound

15.9 ARCHIVE SEARCH

To Search the archive that stored in HDD:

1. Select the desired camera firstly.
2. Select the date on calendar, click or to switch year while click or to select the month.
3. Click Search button, the result will be displayed on the time bar, shown as below figure:

The recording type will be indicated with certain color.

15.9.1 PLAYBACK

Drag the time bar to the right position and click to start playing, control the playing process by clicking corresponding control buttons, at the same time, playback status will be displayed, shown as below figure:

In order to locate the playback process accurately, you can enter time in the field that beneath calendar, shown in figure below:

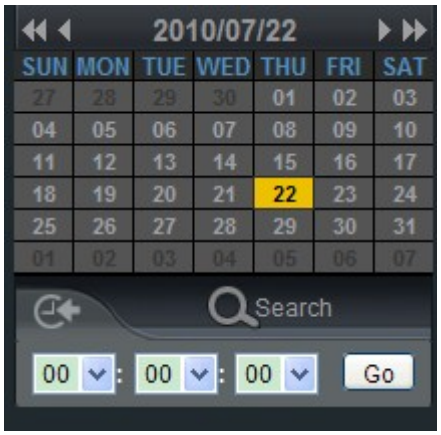

15.9.2 5.3 SNAPSHOT CAPTURE

Enter configuration page and set saving path for downloaded files and snapshot:

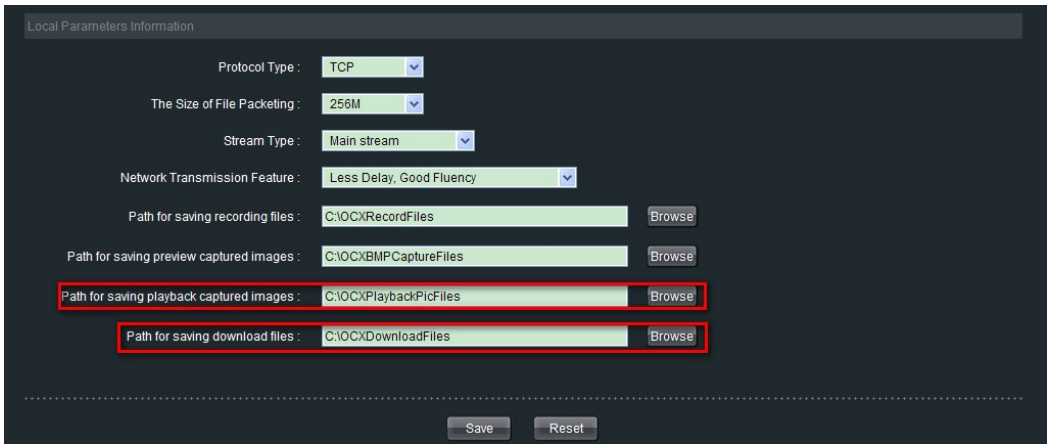

During playback, user can click to capture a snapshot, in addition, click will start to save a video clip and a saving path window will pop up, the icon will be indicated and changed to , click this icon again to stop clipping.

When acquire the search result, user can also download the archives within the day. Click

to navigate to download files selection page, check the desired files and click

to start downloading, click it again to stop downloading.

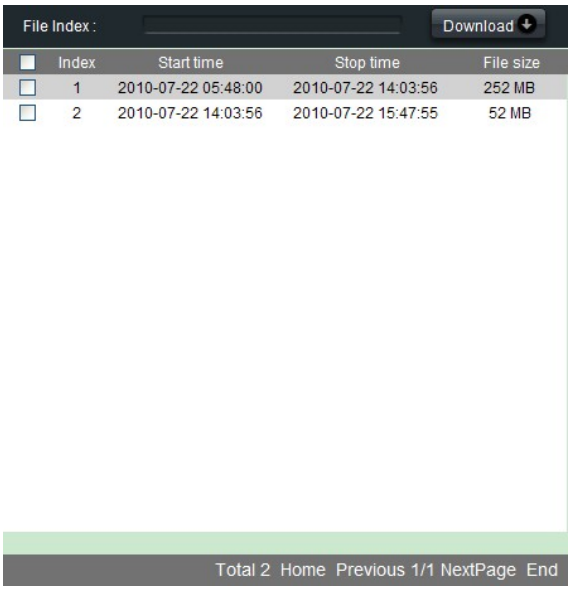

15.10 LOG SEARCH

Click Log tab to enter log search interface:

Note: make sure that there is HDD installed and working properly in the front-end device.

To search device's log information:

Navigate to Log Search page firstly, select the log type and then enter certain time period in the filed, click you will get search result.

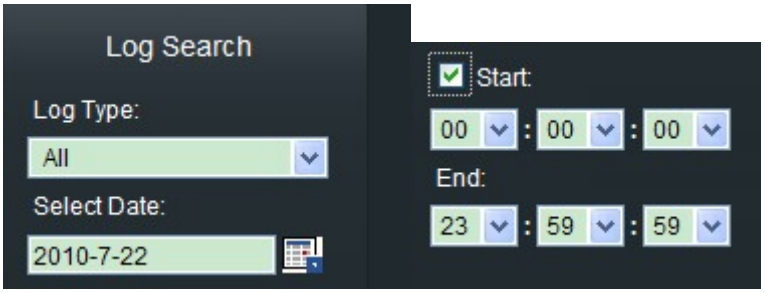

After get log list you can click to export the log information and save it as file with .xls or .txt format.
Note: the maximum displayed log items in the page is 2000, please set a more accurate time period in case that not find the desired log.

15.11 LOCAL CONFIGURATION

When click the Config tab, following page will appear:

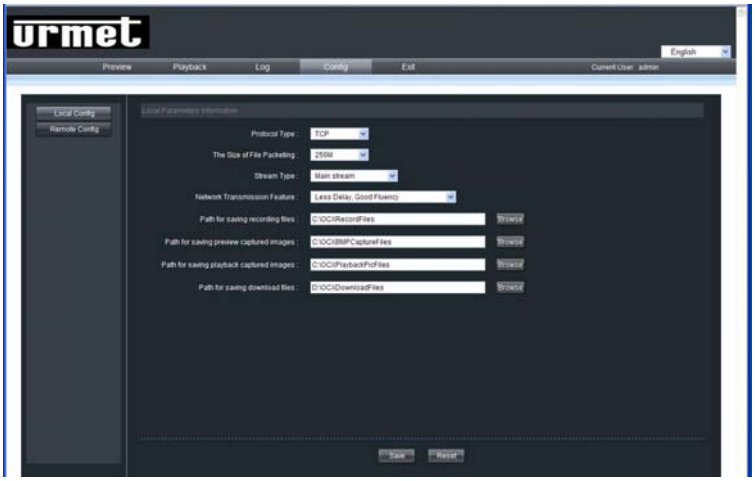

Configuration	Parameters	Description
Local Configuration	Protocol Type	Select a protocol for streaming
	The size of file packing	The max. size of each manual recording file
	Stream Type	Select main stream or sub stream for net preview
	Network Transmission	Select proper settings for streaming to fit your net environment
	Path for saving recording files	The path to save manual recording archives
	Path for saving preview captured images	The path to save snapshot in live preview
	Path for saving playback captured images	The path to save snapshot in playback
	Path for saving download files	The path to save downloaded archives

15.12 REMOTE CONFIGURATION

Please refer to URMET NVM PLUS manual.

16 SPECIFICATIONS (PAL FORMAT)

Item		Specifications		
		1093/064SN	1093/065SN	1093/066SN
Product type		Triplex digital video recorder with network		
Compression algorithm		H.264		
Video standard		PAL (compatible with black and white cameras) H 15625 Hz / V 50 Hz		
Image preview resolution		704 x 576		
Recording resolution		"***4CIF***", "***2CIF***", "***CIF***", "***QCIF***"		
Display	**Live**	Full screen and multiscreen (main video output) / Full screen (SPOT)		
	Playback synchronous	Max 4 ch	Max 8 ch	Max 16 ch
Video inputs		4	8	16
Video input interface		1 BNC (electrical level: 1.0Vpp, impedance: 75 Ω)		
Video outputs		1 VGA high resolution 1024*768 / 60Hz		
		1 BNC (electrical level: 1.0Vpp, impedance: 75 Ω)		
Loop video output		Yes		
Spot video output (live single channel)		1 BNC		
Frame Rate recordings (per video channel)		"**4CIF**", "**2CIF**": no real time "***CIF***" and "***QCIF***": real time		
Memory		Hard disk 500 GB (default) Max 2TB for each HDD Exapanable (max. 2 hard disks) Integrated CD/DVD writer (default)		
Stream type		Video and audio		
Substream		Yes (no real time)		
Bit rate per channel		32Kbps~2048Kbps or user defined (Max. 6144 Kbps)		
Audio inputs		Yes		
Audio input interface (RCA, linear electrical level, impedance: 1KΩ, 2Vpp)		4		
Audio output (linear electrical level, impedance 600Ω)		1		
Audio compression rate		OggVorbis 16 Kbps		
Recording mode		Continuous - manual - upon alarm - scheduled - motion		
Search mode		Recording date/time/type of (also via software)		
User control		Front panel: DVR Remote control: DVR controls + PTZ controls Mouse: DVR controls + PTZ controls		
Communication interface		1 RJ45 10M/100M Ethernet self-adapting interface 1 RS485 for PTZ		
Interface SATA hard disk		2 SATA supporting up to 2 hard disks *		
USB interface		2 interfaces 2.0 (for back-up on USB stick, USB Hard Disk, USB CD-RW and DVD-RW)		
Backup interface		Network, CD/DVD, USB		

External alarm inputs	16
Relay output	4
Max. n. of unicast ** network connections (TCP,UDP,RTP)	18
Motion detector	Yes
Event Encoding	Yes
Post Event Display	Yes
VoIP	Yes
Watermark	Yes
Email with picture attachement	Yes
USB port control	Yes (full USB control: add – rename – delete – play video)
Digital Zoom Live and playback	Yes
Network protocols supported	TCP/UDP/RTP/MULTICAST and NTP
Web multilanguages / Client software NVM PLUS / PDA software mobile	Yes
Local redundant recording supported	Yes
PTZ protocols supported	(Pelco D, Pelco P protocol)
Keyboard interface	Yes
Input voltage	100÷240 Vac, 50÷60Hz
Electrical consumption	Max 40W (without hard disk)
Working temperature range	-10 ÷ 55°c
Humidity	10%÷90% RH
Dimensions (W x H x D)	390x70x440 mm
Weight	~7 kg (without hard disk)

☞**IMPORTANT NOTE**

Technical features may be subject to change without prior notice.

* The addition of a hard disk must be performed by qualified technical personnel or by contacting the technical assistance service.

** Each video channel shown on the remote PC corresponds to one Unicast connection.

Correspondence between code and respective resolution in PAL format are shown in the following table.

CODE	RESOLUTION - PAL
4CIF	704x576
2CIF	704x288
CIF	352x288
QCIF	176x144

17 MAXIMUM RECORDING TIME WITH 500GB HARD DISK

17.1 REF. 1093/064SN

The following resolution options can be selected on Urmet DVR DVS 1093/064SN:

- "***4CIF***", "***2CIF***", "***CIF***" and "***QCIF***" on all channels

☞IMPORTANT NOTE
The times shown in the following tables refer to recordings made on all channels setting the bit rate and frame rates shown.

QCIF RESOLUTION (176x144)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
192	25	1447	60
160	22	1736	72
160	20	1736	72
128	18	2170	90
128	16	2170	90
128	15	2170	90
96	12	2894	121
80	10	3472	145
64	8	4340	181
48	6	5787	241
32	4	8681	362
32	2	8681	362
32	1	8681	362

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
160	25	1736	72
160	22	1736	72
128	20	2170	90
128	18	2170	90
128	16	2170	90
96	15	2894	121
80	12	3472	145
64	10	4340	181
48	8	5787	241
32	6	8681	362
32	4	8681	362
32	2	8681	362
32	1	8681	362

CIF RESOLUTION (352x288)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
512	25	543	23
448	22	620	26
448	20	620	26
384	18	723	30
320	16	868	36
320	15	868	36
256	12	1085	45
224	10	1240	52
160	8	1736	72
128	6	2170	90
80	4	3472	145
48	2	5787	241
32	1	8681	362

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
448	25	620	26
448	22	620	26
384	20	723	30
320	18	868	36
320	16	868	36
256	15	1085	45
224	12	1240	52
160	10	1736	72
128	8	2170	90
80	6	3472	145
48	4	5787	241
32	2	8681	362
32	1	8681	362

2CIF RESOLUTION (704x288)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
640	16	434	18
640	15	434	18
512	12	543	23
448	10	620	26
320	8	868	36
256	6	1085	45
160	4	1736	72
80	2	3472	145
48	1	5787	241

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
512	16	543	23
512	15	543	23
448	12	620	26
320	10	868	36
256	8	1085	45
160	6	1736	72
80	4	3472	145
48	2	5787	241
32	1	8681	362

4CIF RESOLUTION (704x576)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
640	8	434	18
448	6	620	26
320	4	868	36
160	2	1736	72
80	1	3472	145

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
448	8	620	26
320	6	868	36
160	4	1736	72
80	2	3472	145
48	1	5787	241

17.2 REF. 1093/065SN

The following resolution options can be selected on Urmet DVR DVS 1093/065SN:

- "***4CIF***", "***2CIF***", "***CIF***" and "***QCIF***" on all channels

☞IMPORTANT NOTE

The times shown in the following tables refer to recordings made on all channels setting the bit rate and frame rates shown.

QCIF RESOLUTION (176x144)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
192	25	723	30
160	22	868	36
160	20	868	36
128	18	1085	45
128	16	1085	45
128	15	1085	45
96	12	1447	60
80	10	1736	72
64	8	2170	90
48	6	2894	121
32	4	4340	181
32	2	4340	181
32	1	4340	181

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
160	25	868	36
160	22	868	36
128	20	1085	45
128	18	1085	45
128	16	1085	45
96	15	1447	60
80	12	1736	72
64	10	2170	90
48	8	2894	121
32	6	4340	181
32	4	4340	181
32	2	4340	181
32	1	4340	181

CIF RESOLUTION (352x288)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
512	25	271	11
448	22	310	13
448	20	310	13
384	18	362	15
320	16	434	18
320	15	434	18
256	12	543	23
224	10	620	26
160	8	868	36
128	6	1085	45
80	4	1736	72
48	2	2894	121
32	1	4340	181

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
448	25	310	13
448	22	310	13
384	20	362	15
320	18	434	18
320	16	434	18
256	15	543	23
224	12	620	26
160	10	868	36
128	8	1085	45
80	6	1736	72
48	4	2894	121
32	2	4340	181
32	1	4340	181

2CIF RESOLUTION (704x288)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
640	16	217	9
640	15	217	9
512	12	271	11
448	10	310	13
320	8	434	18
256	6	543	23
160	4	868	36
80	2	1736	72
48	1	2894	121

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
512	16	217	9
512	15	271	11
448	12	310	13
320	10	434	18
256	8	543	23
160	6	868	36
80	4	1736	72
48	2	2894	121
32	1	4340	181

4CIF RESOLUTION (704x576)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
640	8	217	9
448	6	310	13
320	4	434	18
160	2	868	36
80	1	1736	72

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
448	8	310	13
320	6	434	18
160	4	868	36
80	2	1736	72
48	1	2894	121

17.3 REF. 1093/066SN

The following resolution options can be selected on Urmet DVR DVS 1093/066SN:

- "***4CIF***", "***2CIF***", "***CIF***" and "***QCIF***" on all channels

☞IMPORTANT NOTE

The times shown in the following tables refer to recordings made on all channels setting the bit rate and frame rates shown.

QCIF RESOLUTION (176x144)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
192	25	362	15
160	22	434	18
160	20	434	18
128	18	543	23
128	16	543	23
128	15	543	23
96	12	723	30
80	10	868	36
64	8	1085	45
48	6	1447	60
32	4	2170	90
32	2	2170	90
32	1	2170	90

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
160	25	434	18
160	22	434	18
128	20	543	23
128	18	543	23
128	16	543	23
96	15	723	30
80	12	868	36
64	10	1085	45
48	8	1447	60
32	6	2170	90
32	4	2170	90
32	2	2170	90
32	1	2170	90

CIF RESOLUTION (352x288)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
512	25	136	6
448	22	155	6
448	20	155	6
384	18	181	8
320	16	217	9
320	15	217	9
256	12	271	11
224	10	310	13
160	8	434	18
128	6	543	23
80	4	868	36
48	2	1447	60
32	1	2170	90

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
448	25	155	6
448	22	155	6
384	20	181	8
320	18	217	9
320	16	217	9
256	15	271	11
224	12	310	13
160	10	434	18
128	8	543	23
80	6	868	36
48	4	1447	60
32	2	2170	90
32	1	2170	90

2CIF RESOLUTION (704x288)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
512	12	136	6
448	10	155	6
320	8	217	9
256	6	271	11
160	4	434	18
80	2	868	36
48	1	1447	60

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
448	12	155	6
320	10	217	9
256	8	271	11
160	6	434	18
80	4	868	36
48	2	1447	60
32	1	2170	90

4CIF RESOLUTION (704x576)

Lots of motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
448	6	155	6
320	4	217	9
160	2	434	18
80	1	868	36

Little motion

Variables to be set		Results	
Bitrate (in Kbps)	**Frame rate** (in fps)	**HD time** (hours)	**HD time** (days)
320	6	217	9
160	4	434	18
80	2	868	36
48	1	1447	60

18 GLOSSARY

- **Dual Stream:** Dual stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the DVR, with the main stream having a maximum resolution of 4CIF and the sub-stream having a maximum resolution of QCIF.
- **DVR:** Acronym for Digital Video Recorder. A DVR is device that is able to accept video signals from analog cameras, compress the signal and store it on its hard drives.
- **HDD:** Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.
- **DHCP:** Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
- **HTTP:** Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network
- **PPPoE:** PPPoE, Point-to-Point Protocol over Ethernet, is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with ADSL services where individual users connect to the ADSL transceiver (modem) over Ethernet and in plain Metro Ethernet networks.
- **DDNS:** Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.
- **NTP:** Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.
- **NTSC:** Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.
- **PAL:** Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.
- **PTZ:** Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.
- **USB:** Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

19 FAQ

- **Why does my DVR make a beeping sound after booting?**

  There are a few reasons for the warning beep your DVR makes after booting.

  1. There is no HDD present in the DVR.
  2. The HDD has not been initialized.
  3. The HDD is defective.

  If you wish to use your DVR without any HDDs, you may disable this warning beep in the Exception Settings menu (See ***Setting Exception***).

- **Why does the DVR seem unresponsive when operating with the IR remote control?**

  If your DVR seem unresponsive when using the IR remote and you have read through the section ***Using the IR Remote Control***, please check:

  1. Check that the batteries are installed correctly in the remote, making sure that the polarities of the batteries are not reversed.
  2. Make sure the batteries are fresh and are not out of power.
  3. Make sure the remote has not been tampered with.
  4. Check around and make sure there are no fluorescent lamps in use.

- **Why does the PTZ seem unresponsive?**

  If the PTZ seem unresponsive, please check:

  1. Check that the RS-485 cable is properly connected.
  2. Check that the dome decoder type is correct.
  3. Check that the dome decoder speed configuration is correct.
  4. Check that the dome decoder address bit configuration is correct.
  5. Check to make sure that the main board RS-485 interface is not broken.

- **Why is there no video recorded after setting the motion detection?**

  If there are no recorded video after setting the motion detection, please check:

  1. Check that the recording schedule is setup correctly by following the steps listed in ***Scheduling a Recording***.
  2. Check that the motion detection area is configured correctly (See ***Setting Up Motion Detection***).
  3. Make sure that channels are being triggered for motion detection (See ***Setting Up Motion Detection***).

- **Why doesn't the DVR detect my USB export device for exporting recorded files?**

  There's a chance that the DVR and your USB device is not compatible. Please refer to our company's website to view a list of compatible devices.

DS1093-039

Prodotto in Cina su specifica URMET Domus
Made in China to URMET Domus specification

FILIALI
20151 MILANO – V. Gallarate 218
Tel. 02.380.111.75 - Fax 02.380.111.80
00043 CIAMPINO (ROMA) V. L.Einaudi 17/19A
Tel. 06.791.07.30 - Fax 06.791.48.97
80013 CASALNUOVO (NA) V. Nazionale delle Puglie 3
Tel. 081.193.661.20 - Fax 081.193.661.04
30030 VIGONOVO (VE) – Via del Lavoro 71
Tel. 049.738.63.00 r.a. - Fax 049.738.63.11
66020 S.GIOVANNI TEATINO (CH) - Via Nenni 17
loc. Sambuceto Tel. 085.44.64.851
Tel. 085.44.64.033 - Fax 085.44.61.862

http://www.urmetdomus.com
e-mail: info@urmetdomus.it

SEDE
URMET DOMUS S.p.A.
10154 TORINO (ITALY)
VIA BOLOGNA 188/C
Telef. 011.24.00.000 (RIC.AUT.)
Fax 011.24.00.300 - 323
Area Tecnica
Servizio Clienti 011.23.39.810